



FJ CRUISER

2 0 1 1



QUICK REFERENCE GUIDE

2011 FJ Cruiser

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new FJ Cruiser.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of FJ Cruiser operations. Every FJ Cruiser owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6

FEATURES/OPERATIONS

Accessory meter	13
Air Conditioning/Heating	16
Audio	14-15
Automatic Transmission	8
Bottle holders-Rear seat	19
Clock	15
Cruise control	17
Cup holders	19
Door-Back	13
Four-wheel drive	9
Intuitive parking assist	16
Light control-Instrument panel	19
Lights¹ & turn signals	12
Parking brake	10
Power outlet-12V DC	18
Power outlet-115V AC	18
Seat adjustments-Front	10
Seats-Folding rear seats	11
Seats-Head restraints	10
Seats-Removing rear seats	11
Telephone controls (Bluetooth®)	17
Tilt steering wheel	8
VSC OFF button	18
Windows	13
Windshield wipers & washers	12

SAFETY AND

EMERGENCY FEATURES





Door locks	20
Seat belts	20
Seat belts-Shoulder belt anchor	20
Spare tire & tools	21
Tire Pressure Monitoring (warning) System	20

¹ Visit your Toyota dealer for information on this and other customizable options.


OVERVIEW

Instrument panel

Steering wheel controls

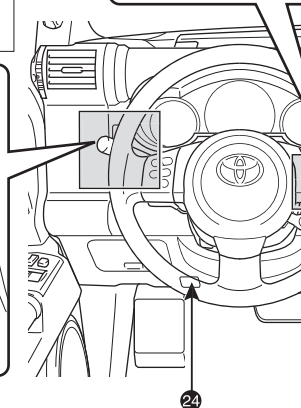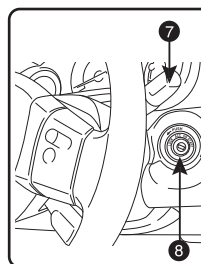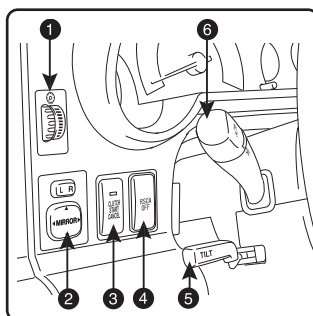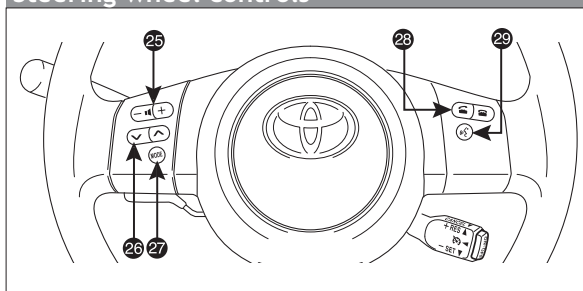

- ① Instrument panel light control
- ② Power outside rearview mirror controls¹
- ③ Clutch start cancel switch¹
- ④ Roll Sensing of Curtain shield Airbag OFF switch
- ⑤ Tilt steering lock release
- ⑥ Headlight and turn signal control
- ⑦ Wiper and washer controls
- ⑧ Ignition switch
- ⑨ Emergency flasher button
- ⑩ Clock
- ⑪ Front passenger seat belt reminder light
- ⑫ Audio system
- ⑬ Engine immobilizer indicator
- ⑭ Air Conditioning controls
- ⑮ Rear window defogger button
- ⑯ VSC OFF switch¹

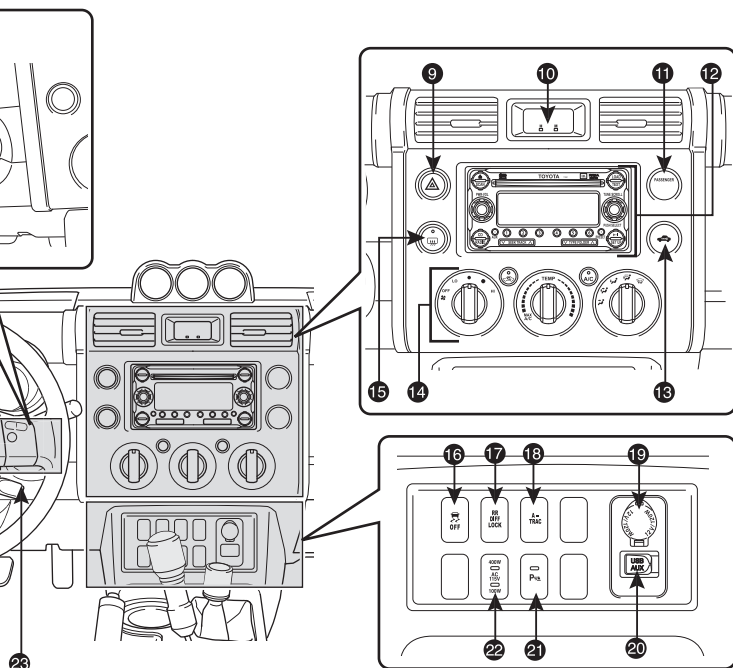


- 17 Rear differential lock button¹
- 18 Active traction control switch¹
- 19 Power outlet
- 20 AUX or USB/AUX port
- 21 Intuitive parking assist switch¹
- 22 Power outlet main switch¹
- 23 Cruise control¹
- 24 Hood release
- 25 Volume control switch (for audio)
- 26 "V ▲" button (for audio)
- 27 "MODE" button (for audio)
- 28 Telephone controls
- 29 Voice command button

¹ If equipped

² For details, refer to the "Navigation System Owner's Manual."

Instrument cluster

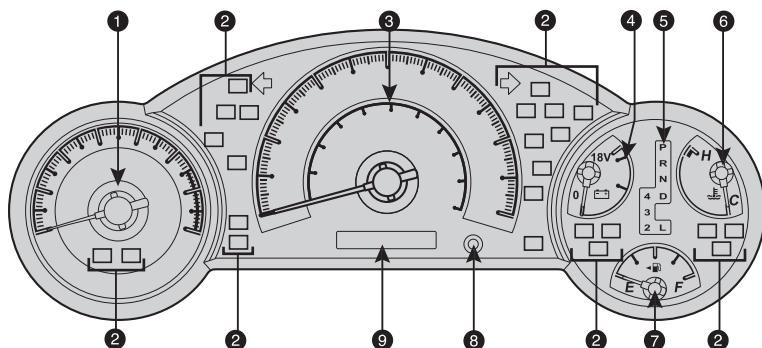

- ① Tachometer
- ② Service indicators
- ③ Speedometer
- ④ Voltmeter
- ⑤ Automatic Transmission indicator
- ⑥ Engine coolant temperature
- ⑦ Fuel gauge
- ⑧ Trip meter reset knob
- ⑨ Odometer and two trip meters

Indicator symbols

BRAKE	Brake system warning ¹
	PASSENGER Driver/Front passenger seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Battery warning ¹
	Low engine oil pressure warning ¹
	Malfunction/Check Engine indicator ¹
MAINT REQD	Maintenance/Service required indicator ¹
	Low fuel level warning ¹
	Open door warning ¹

¹ For details, refer to "If a warning light turns on or a warning buzzer sounds" Section 5-2, 2011 Owner's Manual.

² For details, see "Rear differential lock system," Section 2-4, 2011 Owner's Manual.



Airbag SRS warning¹



Automatic Transmission fluid temperature warning¹



Unengaged Park warning¹



Low Tire Pressure Warning¹



Engine immobilizer system indicator



Front passenger occupant classification indicator



Headlight high beam indicator



Turn signal indicator



Automatic Transmission indicator



Rear differential lock indicator²



Center differential lock indicator³



Vehicle Stability Control OFF indicator



Four-wheel drive indicator³



Slip indicator¹



AUTO Limited Slip Differential indicator



Active traction control system indicator



Roll Sensing of Curtain shield Airbag OFF indicator



Traction Control/OFF indicator



Cruise control indicator⁴





Anti-lock Brake System warning¹

³ If this light flashes, refer to "Four-wheel drive system," Section 2-4, 2011 Owner's Manual.

⁴ If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.

Fuel tank door release and cap

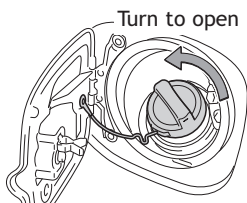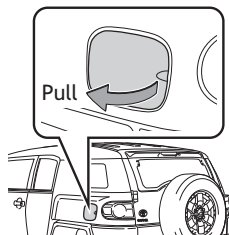


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Keyless entry (if equipped)

Beep sound can be switched ON or OFF. Refer to the *Owner's Manual* for more details.


Locking operation

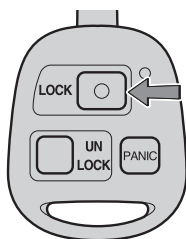

Push



Unlocking operation

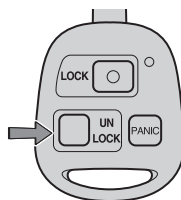

Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button




Push and hold



Hood release

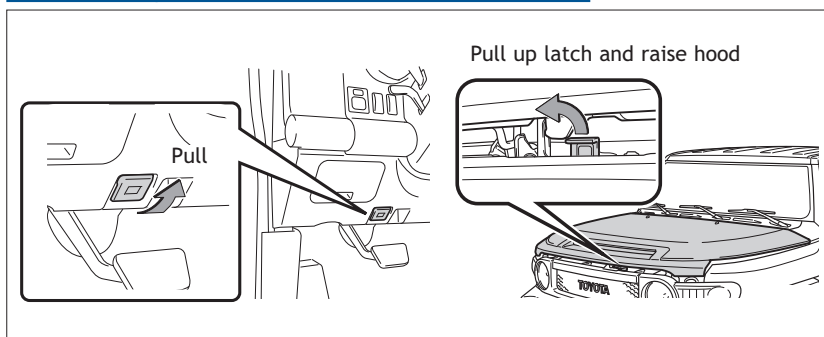

Engine maintenance

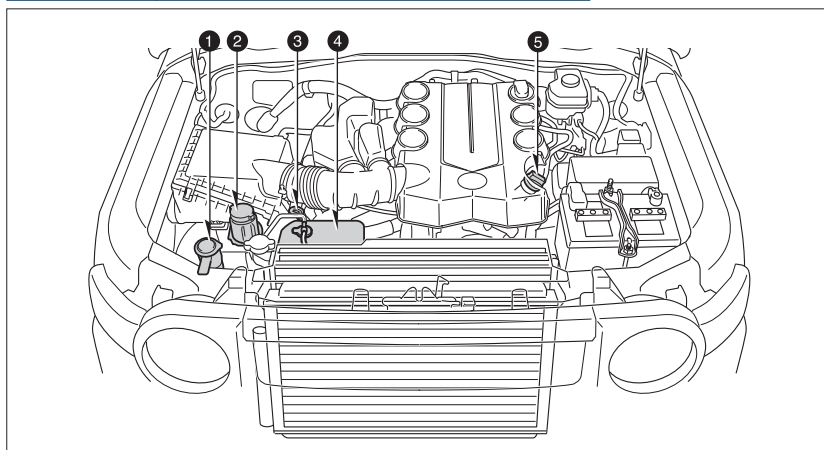


- ❶ Windshield washer fluid tank
- ❷ Power steering fluid reservoir
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir
- ❺ Engine oil filler cap

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

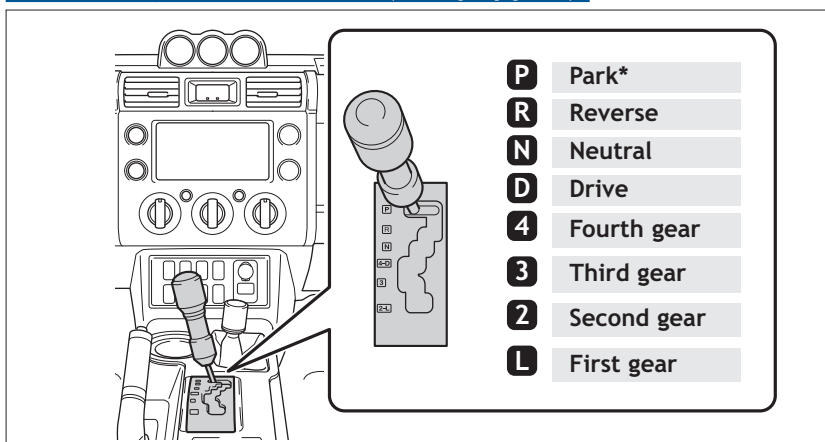

* The key must be in the "ON" position and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Tilt steering wheel

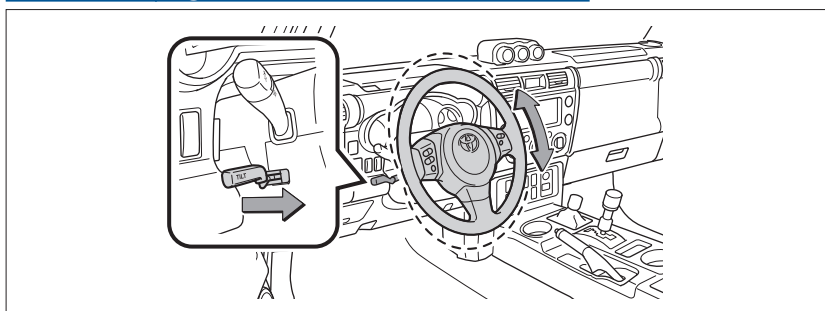


Hold the steering wheel, pull the lock release lever, tilt to the desired angle and release the lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Four-wheel drive (if equipped)


Part-time four-wheel drive models (Automatic Transmission)

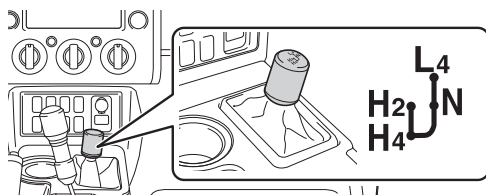

- H2** High speed (2WD)
- H4** High speed (4WD)
Shift to "H4" with speed below 50 mph.
- L4** Low speed (4WD)
Stop vehicle, shift to "N" position, then move the lever to "L4."

NOTE: For best fuel economy and performance under normal driving conditions, shift vehicle into "H2" position.


Full-time four-wheel drive models (Manual Transmission)

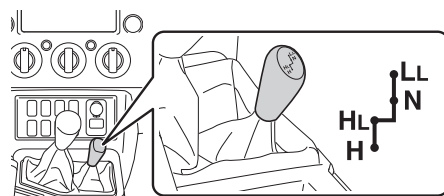

- H** High speed
- HL** High speed
Center differential locked. Depress the clutch pedal to shift from "LL."
- LL** Low speed
Center differential locked. Depress the clutch pedal to shift from "HL" when vehicle is stopped or when speed is below 5 mph.

NOTE: For best fuel economy and performance under normal driving conditions, shift vehicle into "H" position.

Rear differential lock button

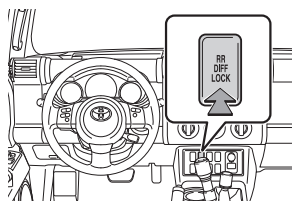

Rear differential lock/unlock

Before using the rear differential lock button:


- Shift the lever into "L4" (Automatic Transmission)
- Shift the lever into "LL" (Manual Transmission)

The following warning lights will illuminate when rear differential lock is engaged:




Parking brake

Set

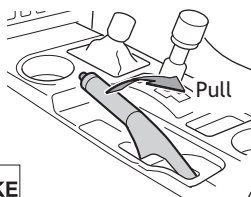


BRAKE

Release

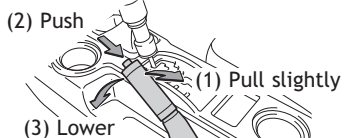


Seat adjustments-Front

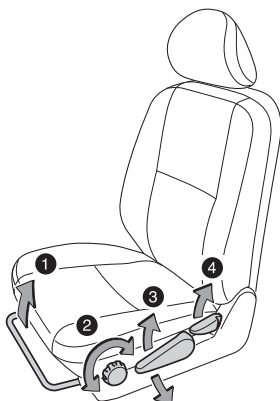


- ① Seat position (forward/backward)
- ② Cushion angle (driver side only)
- ③ Height crank (driver side only)
- ④ Seatback angle


Seats-Head restraints

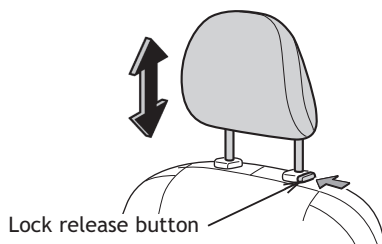

Seats-Folding rear seats

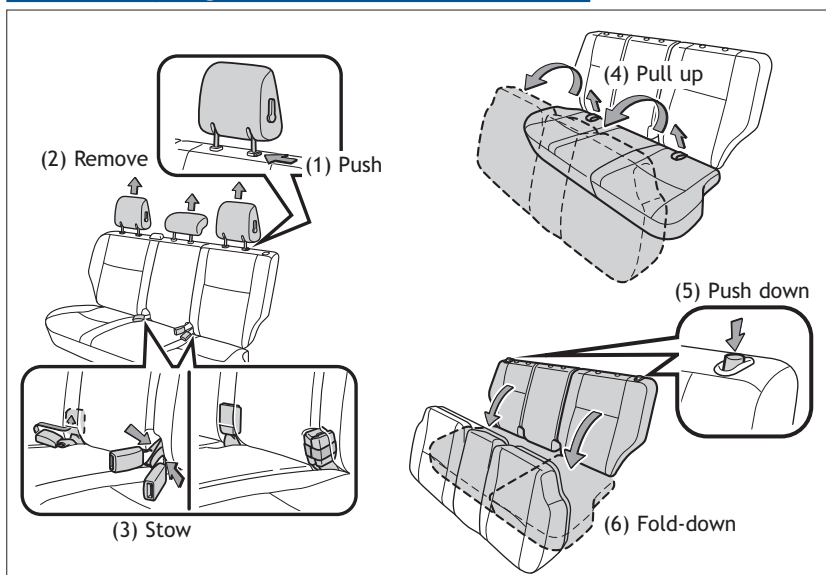


Seats-Removing rear seats

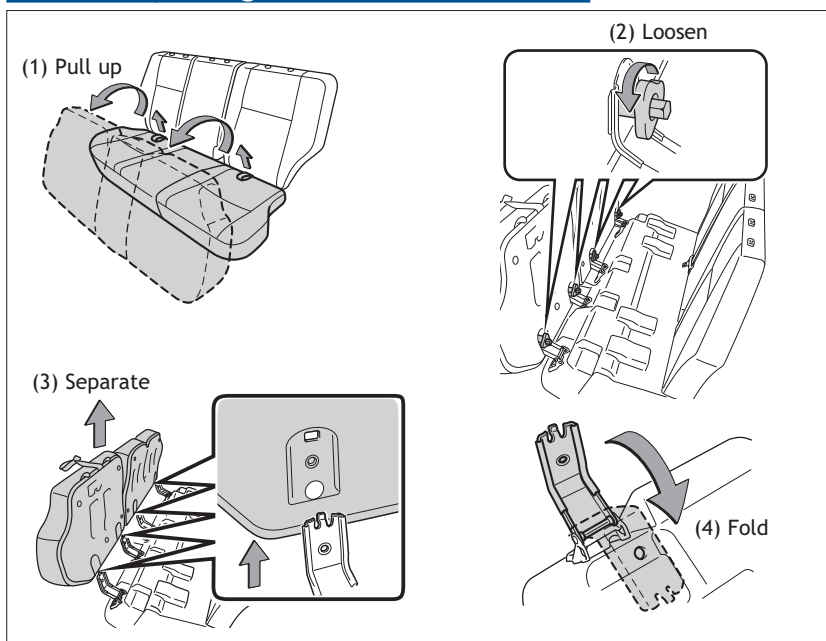


Lights & turn signals

Headlights

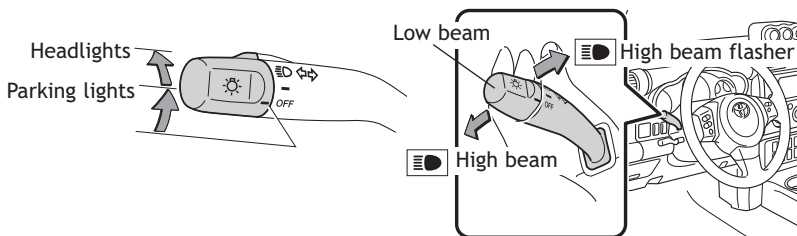


- Automatic light cutoff system** Automatically turns lights off after 30 seconds when all doors are closed with the key in "ACC" or "LOCK." Lights may also be turned off by pushing lock button on remote after locking.
- Daytime Running Light system (DRL) (if equipped)** Automatically turns on the headlights at a reduced intensity.

Turn signals

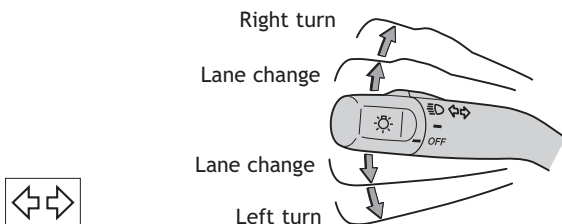


Windshield wipers & washers

Front

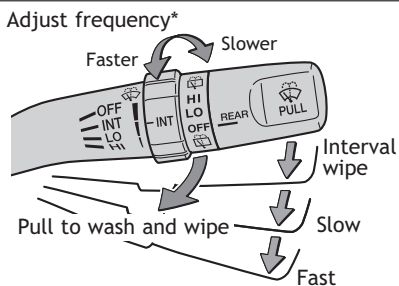

- * **Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wipe frequency.



Rear (if equipped)

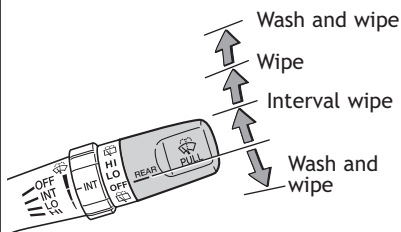

- NOTE:** Rear wiper and washer operate only when back window is fully closed.

Windows

Driver side

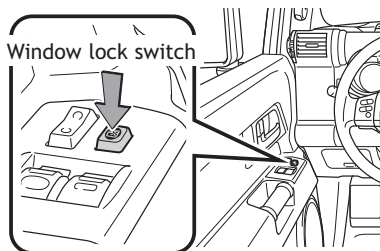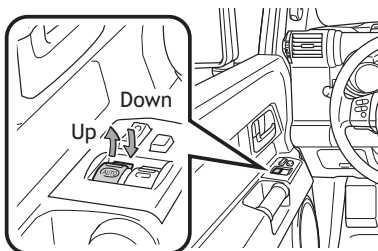


Automatic down operation (driver side only) Push the switch completely down and release to fully open. To stop window at any point, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Door-Back


Open/Close

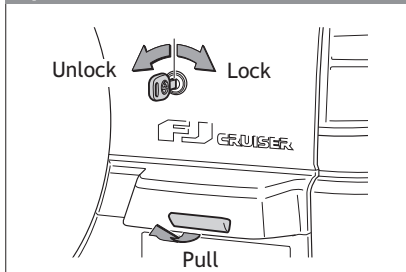

Lock in place

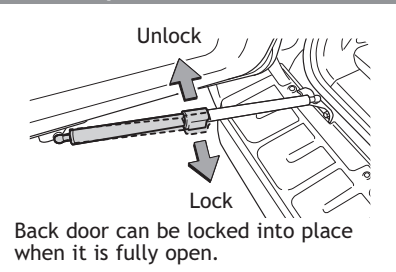


Accessory meter (if equipped)

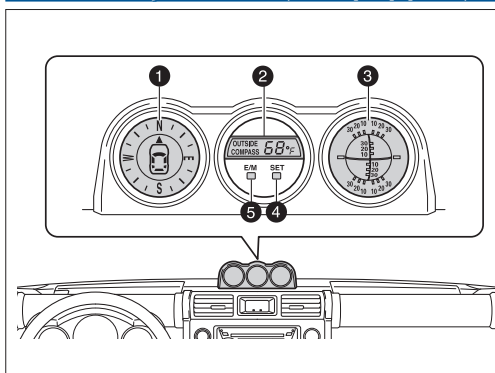


- ① Compass
- ② Outside temperature display
- ③ Clinometer-vehicle slant
- ④ Calibrating the compass setting
- ⑤ Switch between Fahrenheit and Celsius

Audio

Type 1

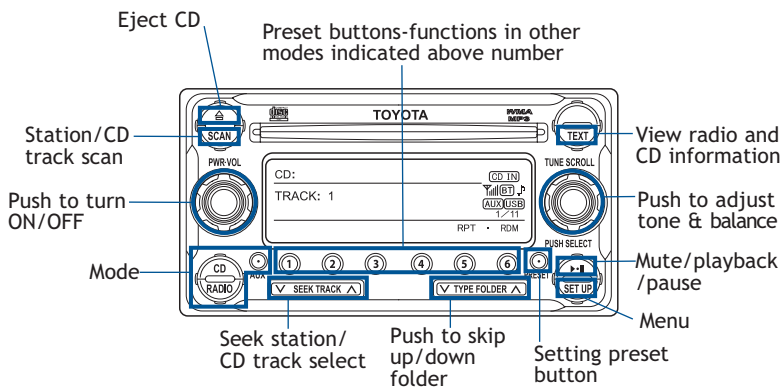

Type 2

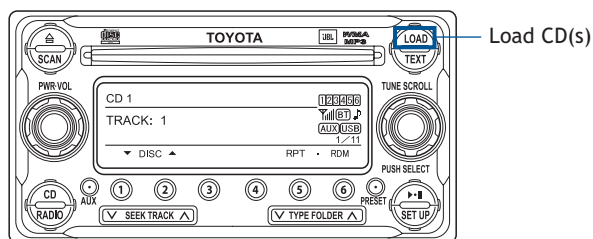

CD player

To scan tracks on a disc Push "SCAN." Push again to hold selection.


CD changer (Type 2)

- To load one disc Push "LOAD" and insert one disc.
- To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.
- To select a file (MP3/WMA only) Turn "TUNE/SCROLL."
- To select a folder (MP3/WMA only) Push either side of "TYPE/FOLDER."

Radio

Preset buttons Tune in the desired station and press a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select. "SCAN" Push and hold "SCAN" to scan preset stations. Push again to hold selection.

Steering wheel switches

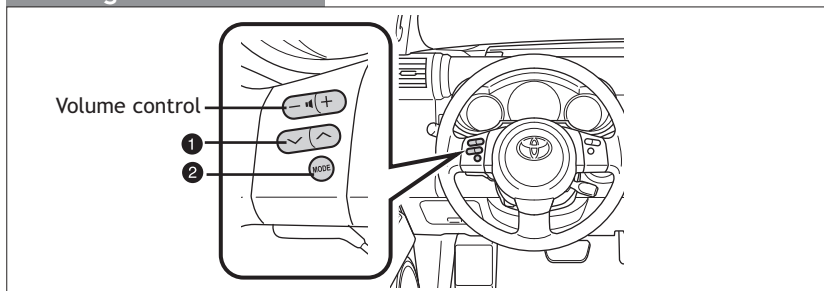


1 "V A"

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

2 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn audio OFF.

AUX port/USB port

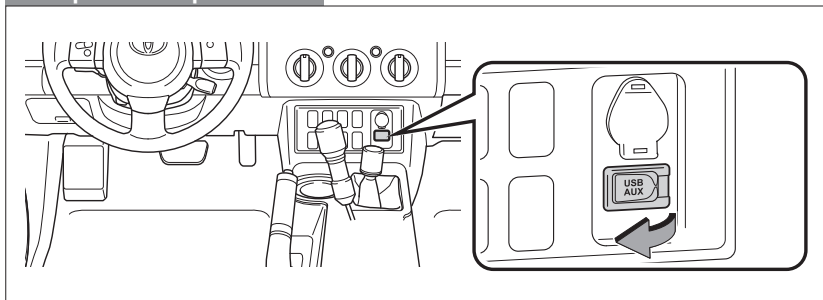


AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system while in USB mode.

Clock

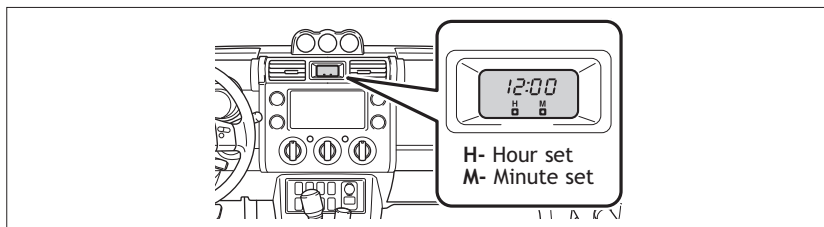


Air Conditioning/Heating

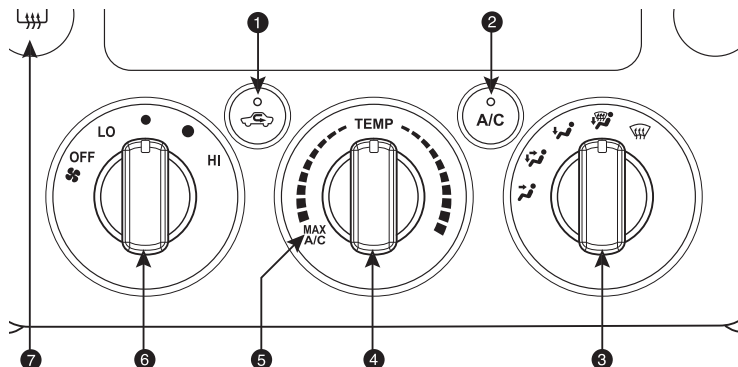


- ① Recirculated cabin air (fresh air when OFF)
- ② Air Conditioning ON/OFF
- ③ Airflow vent
In " " mode, use fresh air (" " indicator OFF) to reduce window fogging. " " mode uses fresh air only.
- ④ Temperature selector
- ⑤ Select for maximum cooling. Air intake will automatically be set to recirculate.
- ⑥ Fan speed
- ⑦ Rear window defogger

Intuitive parking assist (if equipped)

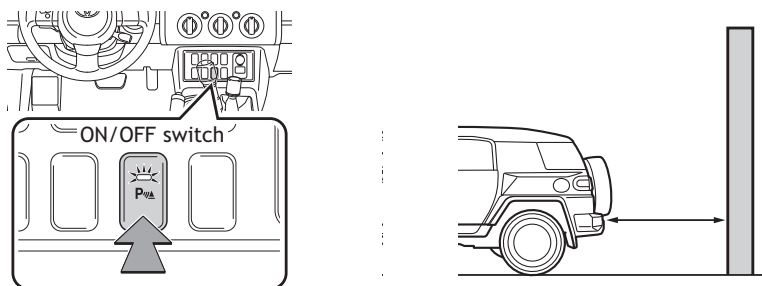

When vehicle is in reverse, a buzzer will sound to inform driver when nearing an obstacle. The system can only be used when the transmission is in the "R" position.


Telephone controls (Bluetooth®)

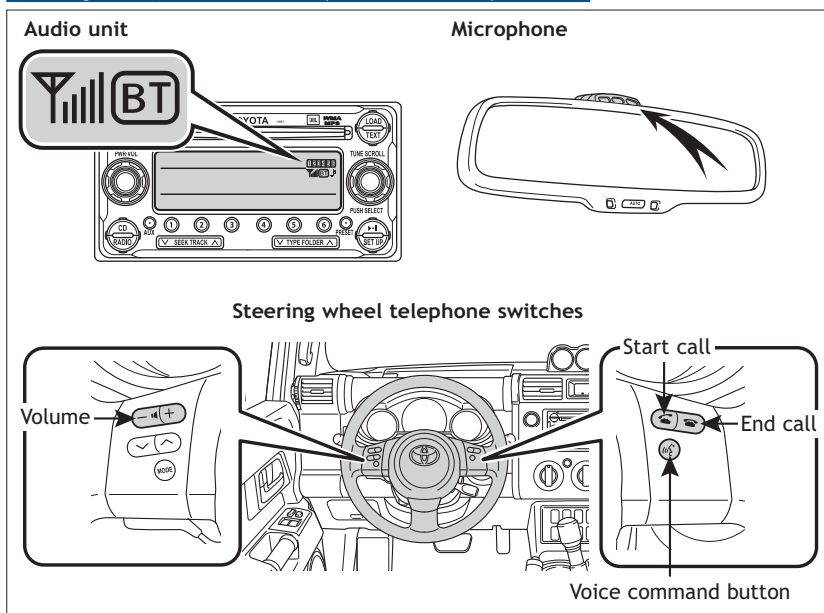

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to "Using the hands-free phone system (for cellular phones)," Section 3-4 in the *Owner's Manual*, or go to Toyota.LetsTalk.com for more information about phone connections and compatibility.


Cruise control (if equipped)

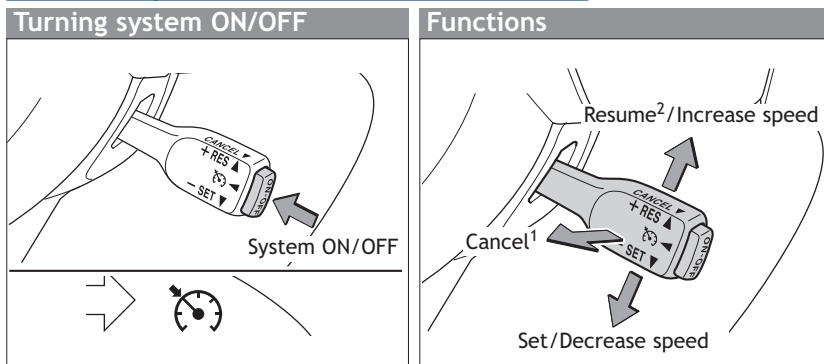

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


VSC OFF button

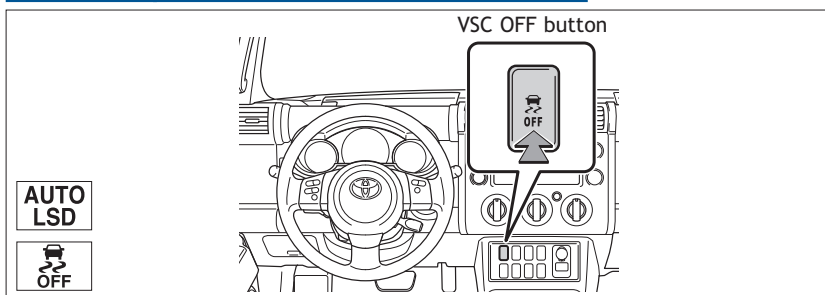

The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD functions.


Refer to Section 2-4 of the *Owner's Manual* for more information.

Power outlet-12V DC

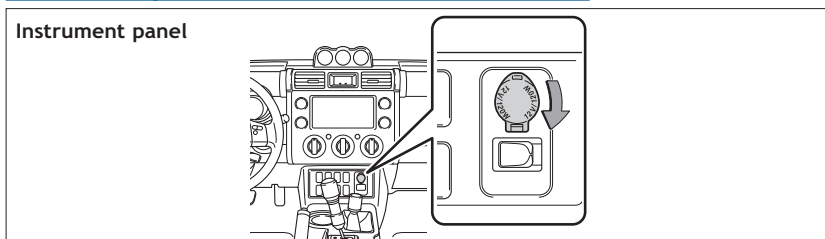

Key must be in the "ACC" or "ON" position to be used.

Power outlet-115V AC (if equipped)

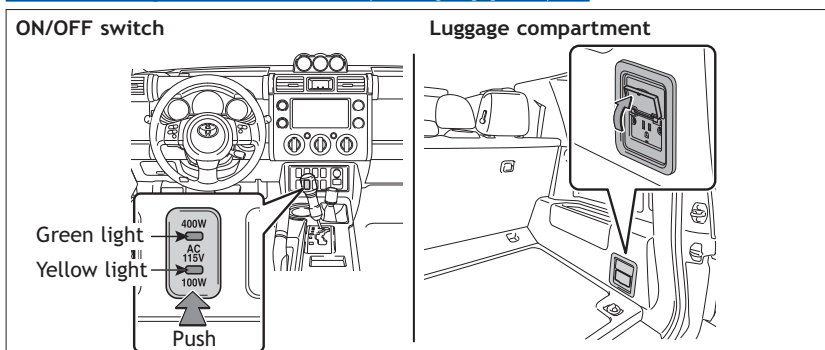


The illumination changes according to the maximum available capacity.

- Green and Yellow 115V AC/400W
- Yellow 115V AC/100W


Engine must be running in order to use the 115V AC power outlet.

Light control-Instrument panel

Brightness control

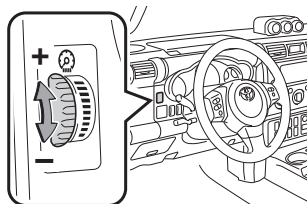


Bottle holders-Rear seat

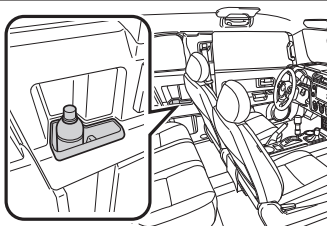


Cup holders


Automatic Transmission models

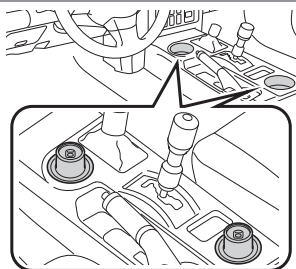

Manual Transmission models

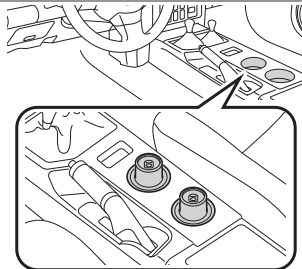


Rear console

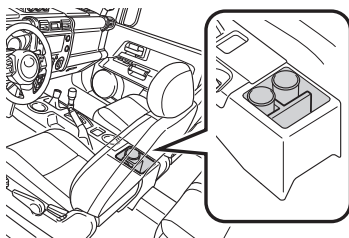

SAFETY AND EMERGENCY FEATURES


Seat belts

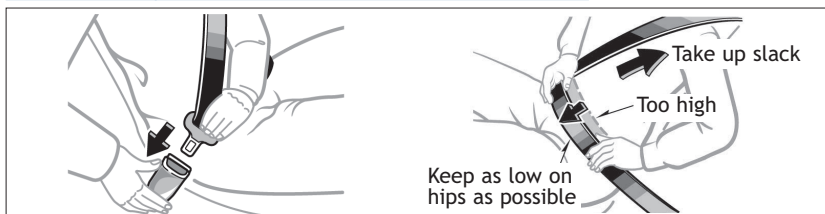


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

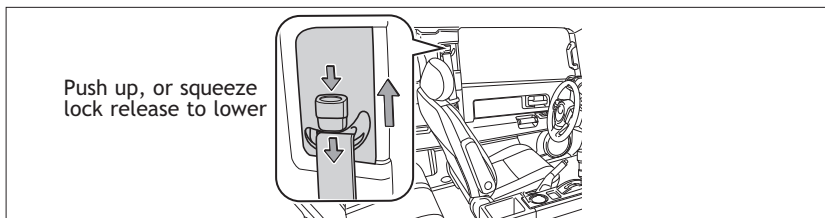

Door locks

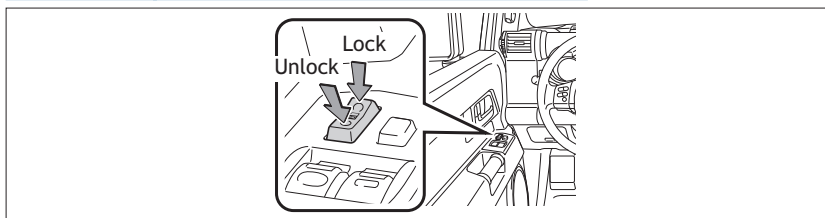

Tire Pressure Monitoring (warning) System

If the Tire Pressure Warning indicator “(U)” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.


If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Refer to the Owner's Manual for more details.


* Refer to load label on door jamb or the *Owner's Manual* for tire inflation specifications.

Spare tire & tools

Tool location

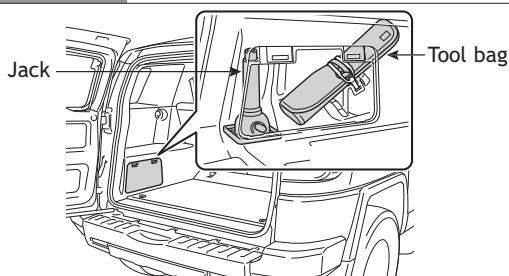


Removing the spare tire (vehicles without rear view monitor system)

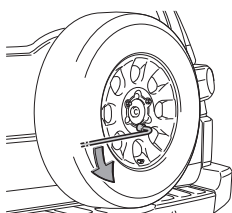

Turn the hold-down nuts counterclockwise and remove.

Removing the spare tire (vehicles with rear view monitor system)

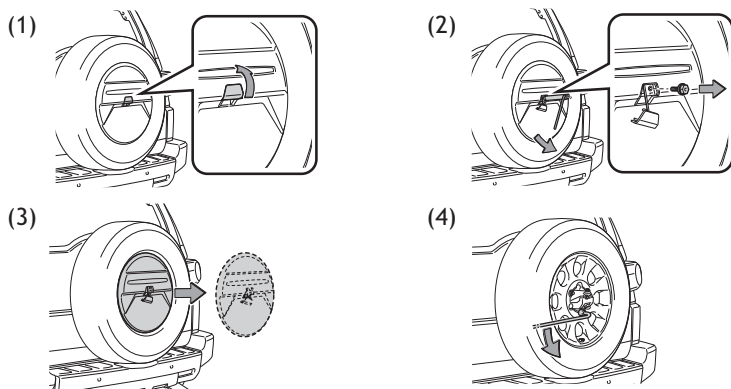

- (1) Remove the bolt cover.
- (2) Remove the bolt that fixes the spare wheel cover in place.
- (3) Remove the spare wheel cover.
- (4) Turn the hold-down nuts counterclockwise and remove.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331