



Sorento

Features & Functions Guide

www.kia.com

Consumer / Roadside Assistance:
1-800-333-4KIA (4542)

See Back Cover for Vehicle
Maintenance Schedule

Always check the Owner's Manual for complete
operating information and safety warnings.



Getting to know your | Sorento



Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable, safe and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

Using This Guide

The information contained in this guide will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

⚠ This Features & Functions Guide provides an overview of vehicle operation and equipment. It is not meant as a substitute for your Owner's Manual. Your Owner's Manual contains specific information about the operation and maintenance of your Kia vehicle, including safety information, cautions and warnings that you need to know. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

⚠ **Warning:** Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

FEATURES & FUNCTIONS GUIDE

QUICK GUIDE

• Tire Pressure Monitoring System (TPMS) _____	Page 02	• Navigation System* _____	Page 13
• ECOMINDER® (ECO) Indicator* _____	Page 03	• AUX/USB/iPod® Port _____	Page 14
• Windshield/Rear Wipers & Washers _____	Page 07	• Climate Control Systems _____	Page 16
• Cruise Control* _____	Page 08	• Manual Gear Shift* _____	Page 19
• Steering Wheel Bluetooth® Controls _____	Page 09	• Folding 2nd & 3rd Row Seats* _____	Page 21
• Audio System* _____	Page 10	• Front Active Headrests _____	Page 21
		• PASSENGER AIR BAG OFF Indicator _____	Page 27

CONTENTS

Instrument Cluster _____ 02

• Tire Pressure Monitoring System (TPMS) _____	02
• Indicator & Warning Lights _____	03
• ECOMINDER® (ECO) Indicator* _____	03

Panel / Stalk / Steering Wheel Controls _____ 04

• Electronic Stability Control (ESC) _____	04
• Instrument Panel Dimmer* _____	04
• Downhill Brake Control (DBC) _____	04
• Hill-Start Assist Control (HAC) _____	04
• 4WD Transfer Mode* _____	05
• Engine Start/Stop Button* _____	05
• Headlights _____	06
• High Beams _____	06
• Turn Signals & Fog Lights* _____	06
• Windshield Wipers & Washers _____	07
• Rear Wiper & Washer _____	07
• Steering Wheel Audio Controls _____	08
• Cruise Control _____	08
• Steering Wheel Bluetooth® Controls* _____	09

Center Panel Controls _____ 10

• Audio System* _____	10
• Audio System Options* _____	10
• CD/AUX/USB/iPod® Operation _____	11
• SIRIUS Satellite Radio® Operation* _____	12
• Navigation System* _____	13
• AUX/USB/iPod® Port _____	14
• Power Outlets* _____	14
• Digital Clock _____	15
• Seat Warmers* _____	15
• Automatic Climate Control* _____	16
• Manual Climate Control* _____	17
• Automatic Gear Shift* _____	18
• Manual Gear Shift* _____	19

Seating _____ 20

• Power Adjustable Driver's Seat*20	
• Manual Driver's Seat* _____	20
• Folding 2nd & 3rd Row Seats* _____	21
• Front Active Headrests* _____	21
• Front Seat Headrest Adjustment _____	21

Driver's Controls - Exterior _____ 22

• Smart Key* _____	22
--------------------	----

• Remote Keyless Entry* _____	23
• Double-Turn Lock/Unlock All* _____	23
• Fuel Cap / Malfunction Indicator (Check Engine Light) _____	23

Driver's Controls - Interior _____ 24

• Power Windows, Window Lock & Central Door Lock _____	24
• Power/Heated Outside Mirrors* _____	24

Roof Panel Controls _____ 25

• Rear Seat Entertainment System* _____	25
---	----

Safety _____ 26


• Rear View Backup Camera* _____	26
• Backup Warning System (Rear Parking Assist System)* _____	26
• Occupant Classification System (OCS)/ PASSENGER AIR BAG OFF Indicator _____	27
• Child Safety Locks _____	27
• Safety Belts _____	28

Maintenance _____ (see back cover)

*If equipped

Always check the Owner's Manual for complete operating information and safety warning

INSTRUMENT CLUSTER

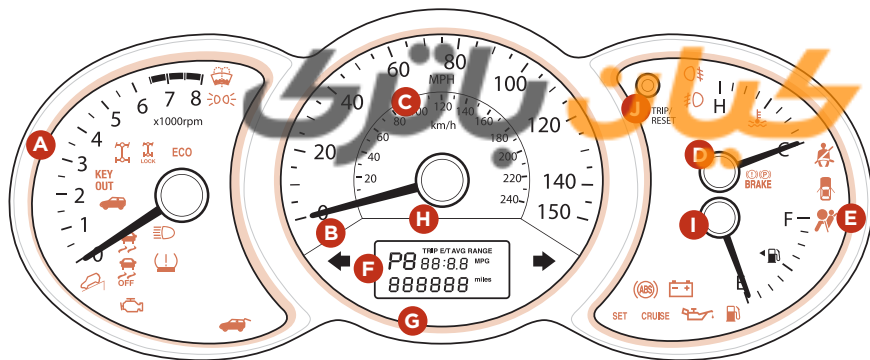

- A Tachometer
- B Turn Signal Indicators
- C Speedometer
- D Engine Temperature Gauge
- E Indicator & Warning Lights
- F Gear Shift Position Indicator
- G Odometer/Tripmeter
- H Trip Computer*
- I Fuel Gauge
- J Trip/Reset Button

TIRE PRESSURE MONITORING SYSTEM (TPMS)



The indicator (🚗) functions as both, Low Tire Pressure Light and TPMS Malfunction Indicator.

If one or more tires are significantly under-inflated the indicator will illuminate. Other causes for the indicator to illuminate are a spare tire without TPMS or a change in temperature (cold).

- Inflate tire(s) to specifications to turn off Low Tire Pressure Light (🚗). This specification can be found on a label attached to the front driver's door jamb.
- The TPMS Malfunction Indicator (🚗) will illuminate after it blinks for approximately one minute when there is a problem with the Tire Pressure Monitoring System. See your dealer for service.

**If equipped*


NOTE: Tire pressure should be checked at least once a month. Only adjust tire pressure on "cold tires."

NOTE: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

NOTE: For proper maintenance, safety, and maximum fuel economy, you must always maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle.

INDICATOR & WARNING LIGHTS

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

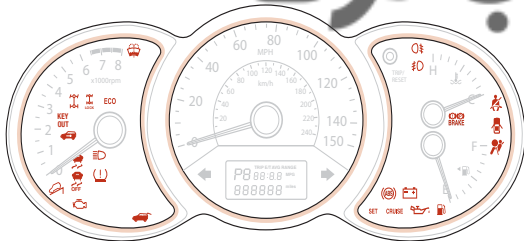

ECOMINDER® (ECO) INDICATOR

The ECOMINDER® (ECO) indicator, which is identified on your instrument cluster by the "ECO" name, is displayed to help improve fuel efficiency. While in ECO mode, the ECOMINDER® indicator will illuminate when the vehicle is operated in a manner that achieves maximum fuel economy. Fuel economy depends on the driver's driving habits and road conditions.

Tips to improve your fuel efficiency

- 1 Drive smoothly and accelerate at a moderate rate
- 2 Drive at moderate speeds
- 3 Keep tires inflated to the recommended pressure
- 4 Be sure the wheels are properly aligned

NOTE: To turn the ECOMINDER® indicator OFF/ON, press the TRIP button 1 or more times until ECO mode is displayed. Then press and hold the TRIP button for more than 1 second until ECO function turns OFF or ON.

For more information on improving Fuel Economy, refer to www.kia.com Owners section, section 5 of your Owner's Manual or your local dealership.

**If equipped*

- Low Windshield Washer Fluid Indicator
- 4WD System Warning Light*
- 4WD LOCK Indicator*
- ECOMINDER™ Indicator
- Key Out Warning Light*
- Immobilizer Indicator*
- High Beam Indicator
- Electronic Stability Control (ESC) Indicator
- Electronic Stability Control (ESC) OFF Indicator
- Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator
- Downhill Brake Control (DBC) Indicator
- Malfunction Indicator
- Tailgate Open Warning Light
- Front Fog Light Indicator*
- Seat Belt Warning Light
- Parking Brake & Brake Fluid Warning Light
- Door Ajar Warning Light
- Air Bag Warning Light
- Anti-lock Braking System (ABS) Warning Light
- Charging System Warning Light
- Cruise SET Indicator
- Cruise ON/OFF Indicator
- Engine Oil Pressure Warning Light
- Low Fuel Level Warning Light

NOTE: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

Always check the Owner's Manual for complete operating information and safety warning

ELECTRONIC STABILITY CONTROL (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

A Press ESC button to turn ESC OFF/ON.

NOTE: ESC is active by default at vehicle start-up.

INSTRUMENT PANEL DIMMER*

B With parking lights/headlights ON, press the (+) or (-) to adjust the brightness of the instrument panel illumination.

DOWNHILL BRAKE CONTROL (DBC)


DBC helps drivers maneuver down steep hills by automatically braking for them, allowing drivers to focus solely on steering.

C Press  button to turn DBC ON/OFF.

NOTE: The DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph.

WARNING: If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized KIA dealer and have the system checked.

**If equipped*

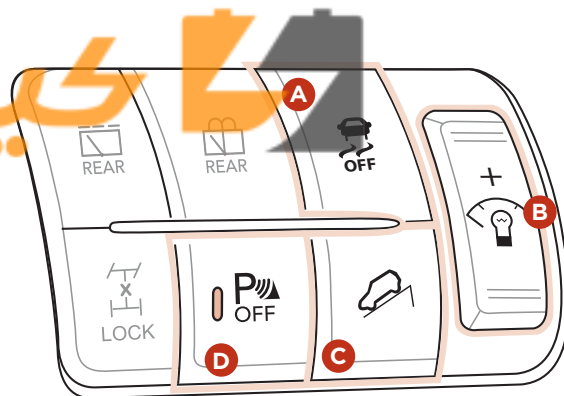

D - Backup Warning System OFF button (see page 26 for more details)

HILL-START ASSIST CONTROL (HAC)


HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

NOTE: The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

NOTE: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

4WD TRANSFER MODE*

Press the 4WD Transfer Mode selector button to activate or deactivate 4WD Lock mode.

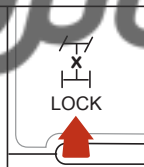

4WD AUTO MODE:

The vehicle operates similar to conventional 2WD vehicles. If the system determines that there is a need for the 4WD mode, the engine's driving power is distributed to all four wheels automatically without driver intervention.

NOTE: When driving on normal roads, deactivate 4WD Lock mode by pressing the 4WD Lock mode button (indicator light will go OFF).



4WD LOCK MODE:


Activates 4WD for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to maximize traction.

NOTE: Reduce speed when turning corners in 4WD.

ENGINE START/STOP BUTTON*

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park

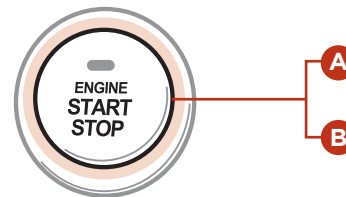

NOTE: To unlock steering wheel and use electrical accessories:

- ACCESSORY position (Orange Light) **A**
Press the ENGINE START/STOP button while in the OFF position without depressing the brake pedal
- ON position (Green Light) **B**
Press the ENGINE START/STOP button while in ACC position without depressing brake pedal

NOTE: To use ENGINE START/STOP button, you must have the transmitter key fob on your person or inserted in the fob holder.


NOTE: To use the ENGINE START/STOP button, you must have the transmitter key fob on your person or inserted in the fob holder.

WARNING: Never press the ENGINE START/STOP button while the vehicle is in motion except in an emergency. If the engine stops while the vehicle is in motion, this would result in loss of directional control and braking function, which could cause an accident.


*If equipped

Always check the Owner's Manual for complete operating information and safety warning

HEADLIGHTS

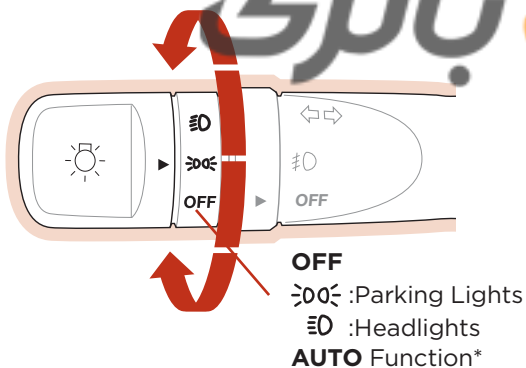


HIGH BEAMS

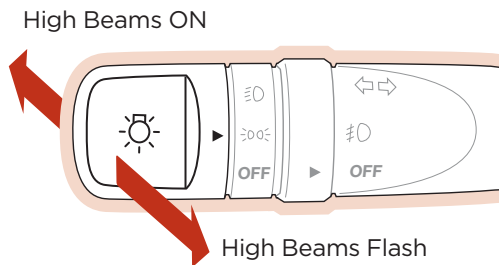

*If equipped

TURN SIGNALS & FOG LIGHTS*

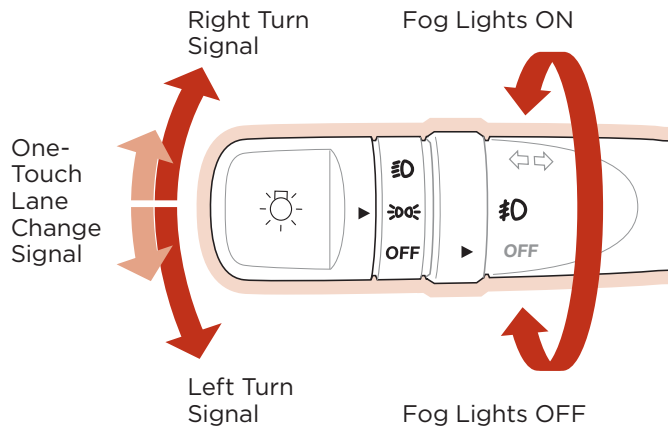


One-Touch Lane Change Signal is activated by moving the turn signal slightly for less than 1.5 seconds and then releasing. The lane change signal will blink 3 times.

NOTE: When the Right or Left Turn Signals cancel, they will blink 3 additional times.

NOTE: Headlights must be ON for Fog Light operation.

WINDSHIELD WIPERS & WASHERS

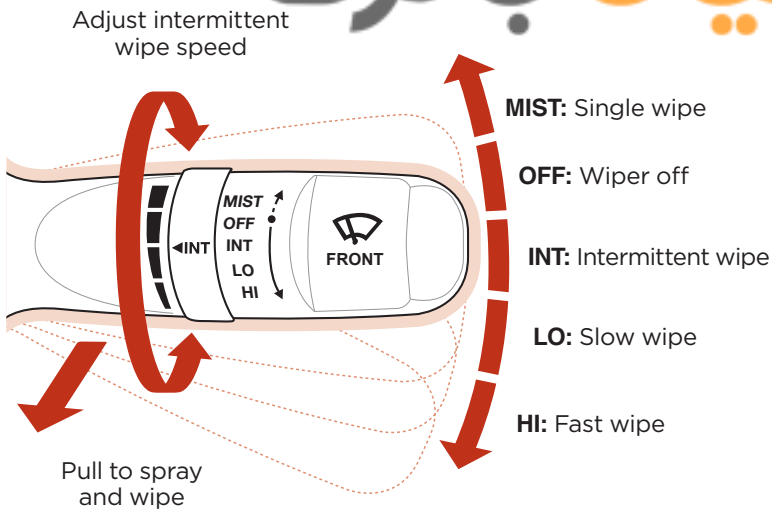

REAR WIPER & WASHER




- A** Push to turn wiper ON/OFF for continuous wipe
- B** Push to spray and wipe

NOTE: Located left of steering wheel on dash.

**If equipped*

Always check the Owner's Manual for complete operating information and safety warning

STEERING WHEEL AUDIO CONTROLS

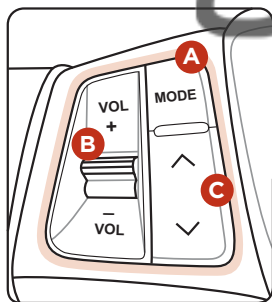

A Audio Mode: Press to cycle through FM1-2 / AM / SAT 1-3 / CD / USB / AUX (iPod®)

NOTE: Pressing the Mode button for more than 1 second will turn Audio Mode OFF.

B Adjust Volume: Raises or lowers speaker volume

C Seek/Preset


Radio Mode: Press to advance through Preset Stations. Press and hold to AUTO SEEK

CD/USB/iPod® Mode: Press to TRACK UP/DOWN. Press & hold to FF/REW.

D Mute Audio: Mutes all audio

**If equipped*

CRUISE CONTROL

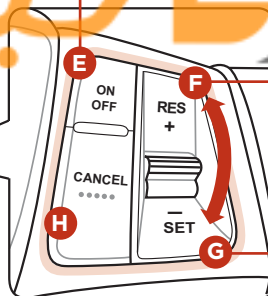

System ON/OFF

RES/+:
Resume or Increase
Cruising Speed

-/SET:
Set or Decrease
Cruising Speed

E Cruise Control ON/OFF:

To turn Cruise Control ON/OFF:

- Press the Cruise Control ON/OFF button **E**

F Resume Cruising Speed: Resume or increase Cruising Speed

G Set Cruising Speed: Set or decrease Cruising Speed

H Cruise Control Cancel: Cancel Cruise Control setting

To cancel Cruise Control setting, do one of the following:

- Press the brake pedal

- Press the CANCEL button **H**

NOTE: This system is designed to function above approximately 25 mph.

STEERING WHEEL BLUETOOTH® CONTROLS*

- A Volume button:** Raises or lowers speaker volume
- B Mute button:** Mute the microphone during a call
- C Talk button:** Activates voice recognition, brings up menus and places calls. Push to place a call with minimal vocal command prompts from the system.
- D Receive Call button:** Receives and transfers calls. Push to place a call using vocal command prompts from the system, or to answer an incoming call.
- E End Call button:** Ends calls or cancels functions

Bluetooth® Audio Speaker Adaptation (Driver's Voice)


For users with accents, this option improves performance of voice recognition to a particular user's voice.

- 1** Press END CALL button **E** for 10 seconds
- 2** Say "Record Profile"
- 3** Say "Yes"
- 4** Say the words shown on Audio System display

Bluetooth® FAQs on www.kia.com Owners section

The **Bluetooth®** word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. A **Bluetooth®** enabled cell phone is required to use **Bluetooth®** wireless technology.

**If equipped*

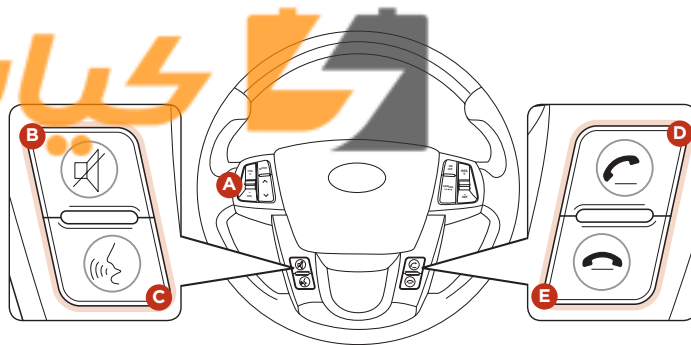

NOTE: When using Voice Recognition, some phones may reverse the names in the contact list from {FIRST NAME} {LAST NAME} to {LAST NAME} {FIRST NAME}.

NOTE: If experiencing difficulty in using Voice Recognition to place a call, be sure you are using the actual full contact name as entered in your phone book, not a casual or nick-name (e.g., if name was entered as "Robert Smith", say, "Call Robert Smith", not "Call Bob Smith").

NOTE: Phone book transfer upload time varies by phone model and with number of phone book entries.

NOTE: Changing language may delete paired phones.

NOTE: Because of differences in phone quality, service providers and **Bluetooth®** chip programming, functionality may differ from one phone to another.


NOTE: Refer to Section 4 of your Owner's Manual for more specific **Bluetooth®** phone pairing and operation instructions.

WARNING: Do not use a cellular phone or perform **Bluetooth®** settings (e.g. pairing a phone) while driving.

Always check the Owner's Manual for complete operating information and safety warning

CENTER PANEL CONTROLS

AM/FM/CD/MP3/SIRIUS SATELLITE RADIO AUDIO SYSTEM*

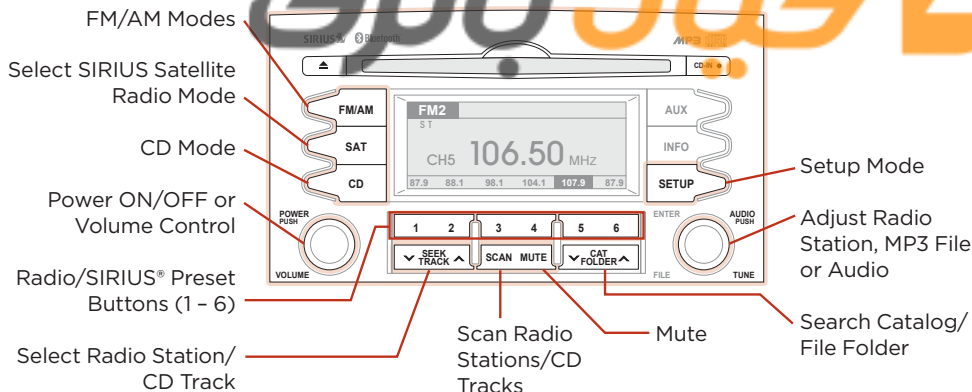

NOTE: For further audio system operations, refer to pages 11 - 13.

NOTE: SIRIUS Satellite Radio service not available in AK or HI.

NOTE: SIRIUS Satellite Radio service requires a subscription; 3-month trial subscription included with vehicle purchase.


NOTE: Forcing a CD into the slot may damage the player.

NOTE: Only equipped options will be displayed.

AUDIO SYSTEM OPTIONS*

Press the SETUP button, then use the Tune Dial to cycle through the available options*. Press the Tune Dial to select an option to adjust. Possible options include the following:

- Scroll
- SDVC (Speed Dependent Volume Control)
- Power Bass* Setup
- SIRIUS Satellite Radio Setup
- Phone* Setup

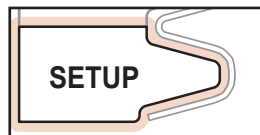


NOTE: Only equipped options will be displayed.

*If equipped

CENTER PANEL CONTROLS

CD/AUX/USB/iPOD® OPERATION

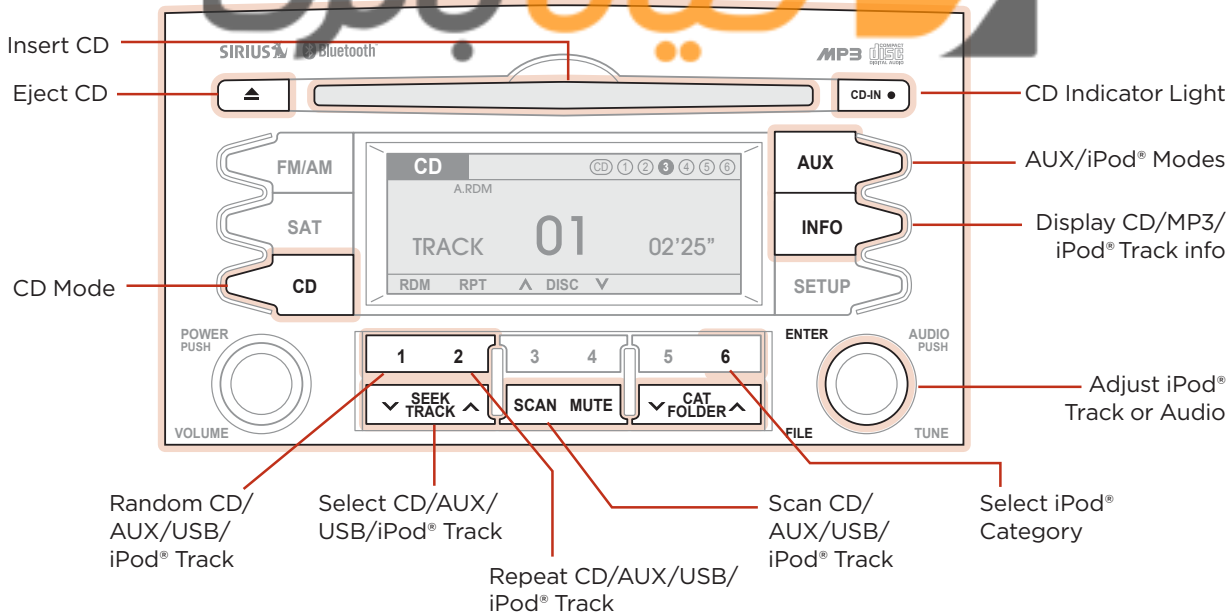

NOTE: For further audio system operations, refer to pages 10, and 12 - 13.


NOTE: Forcing a CD into the slot may damage the player.

NOTE: Only equipped options will be displayed.

**If equipped*

Always check the Owner's Manual for complete operating information and safety warning

SIRIUS SATELLITE RADIO OPERATION*

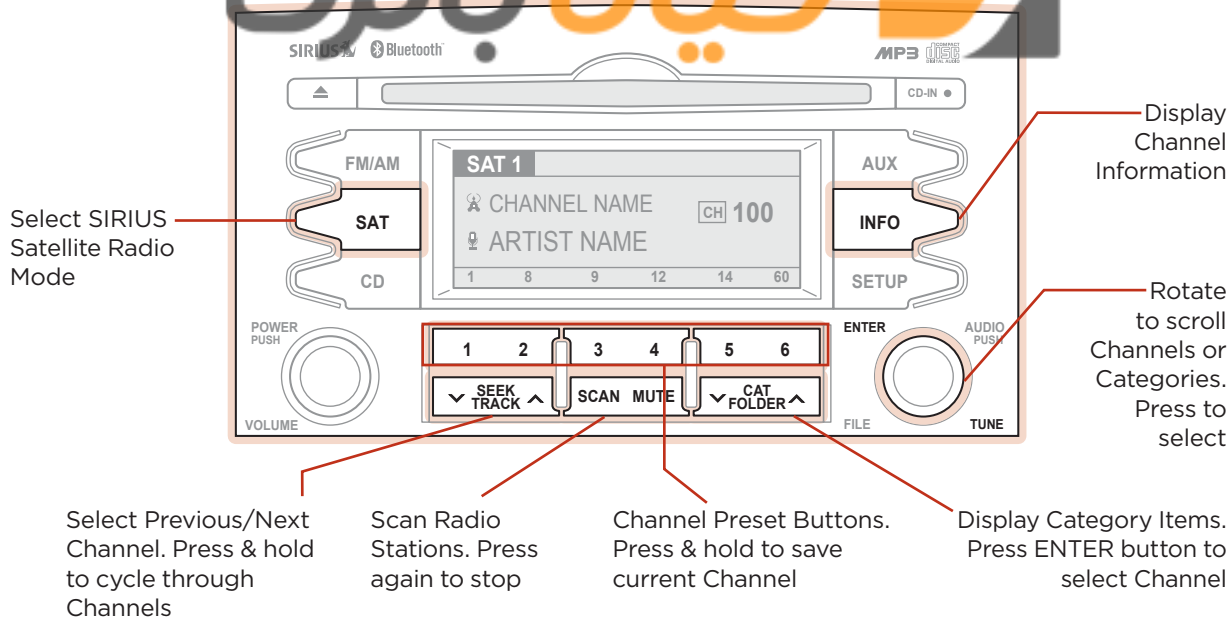

NOTE: For further audio system operations, refer to pages 10 - 11 and 13.

NOTE: SIRIUS Satellite Radio service not available in AK or HI.


NOTE: SIRIUS Satellite Radio service requires a subscription; 3-month trial subscription included with vehicle purchase.

NOTE: Only equipped options will be displayed.

**If equipped*

CENTER PANEL CONTROLS

AM/FM/CD/MP3/SIRIUS SATELLITE RADIO WITH NAVIGATION SYSTEM*

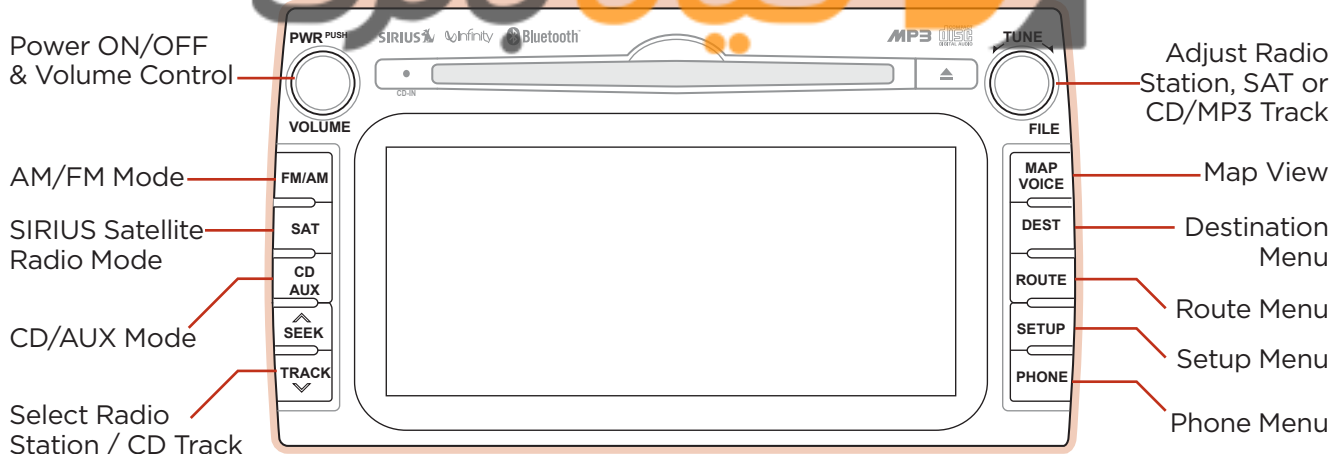

WARNING: Prolonged use of the Navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation system should be operated with the engine running to prevent battery discharge.

NOTE: For further navigation system operation, refer to the *Digital Navigation System Users Manual*.

NOTE: For further SIRIUS Satellite Radio operations, refer to pages 10 and 12.

NOTE: SIRIUS Satellite Radio service not available in AK or HI.

NOTE: SIRIUS Satellite Radio service requires a subscription; 3-month trial subscription included with vehicle purchase.

NOTE: Only equipped options will be displayed.

**If equipped*


Always check the Owner's Manual for complete operating information and safety warning

CENTER PANEL CONTROLS

AUX/USB/iPOD® PORT*

POWER OUTLETS*

NOTE: The Power Outlets are inactive when ignition is in the OFF position.

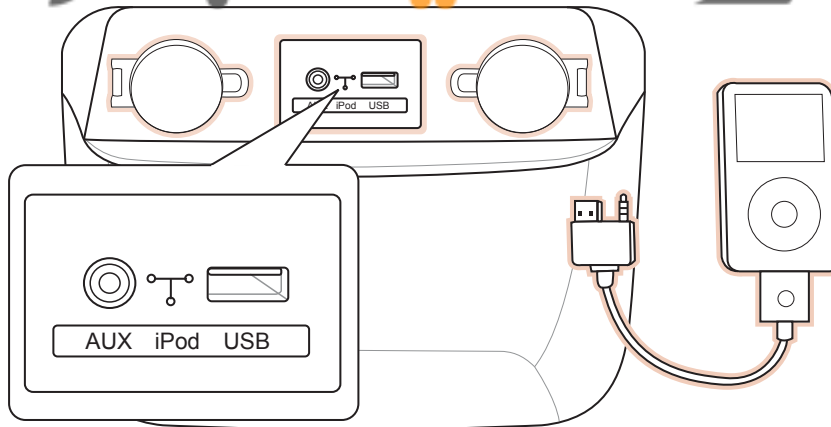

WARNING: To avoid damage to your USB device:


- Connect the device AFTER starting the vehicle. Make sure the device is not plugged in when starting.
- Disconnect carefully. Change the audio system to a mode other than AUX / USB or turn the system off before disconnecting the device.

WARNING: The Kia Power Cable is needed in order to operate an iPod® with the audio buttons on the Audio System. The PC Cable provided by Apple may cause malfunction and should not be used for Kia vehicles. The Kia iPod® Power Cable may be purchased through your Kia dealership.

**If equipped*

CENTER PANEL CONTROLS

DIGITAL CLOCK

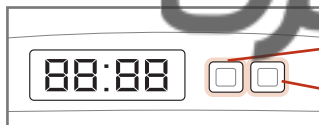


Advance Hour

Advance Minutes

Press and hold both for more than 3 seconds to switch from 12 to 24 hour formats

SEAT WARMERS*

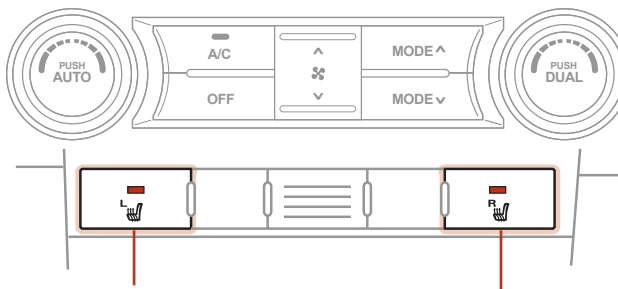

Driver Seat Warmer ON/OFF

Passenger Seat Warmer ON/OFF

NOTE: With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature.


NOTE: System does NOT turn off when ignition is cycled. To turn off system, press the seat warmer switch.

**If equipped*

Always check the Owner's Manual for complete operating information and safety warning

CENTER PANEL CONTROLS

AUTOMATIC CLIMATE CONTROL*

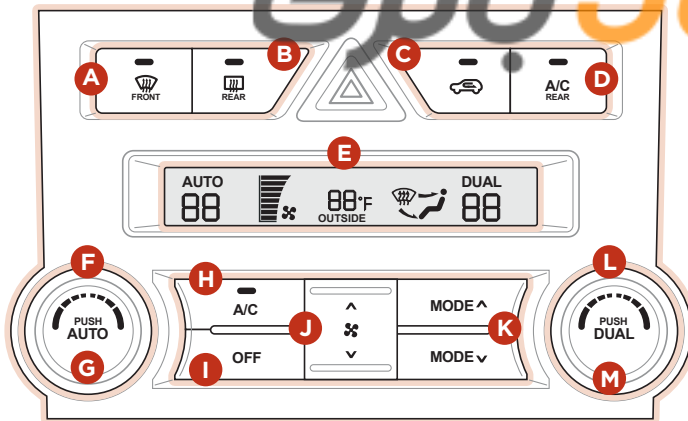

- A Windshield defroster
- B Rear window defroster
- C Recirculated air/fresh air
- D 3rd row air conditioning ON/OFF button*
- E Climate Control display
- F Driver's Temperature control
- G Automatic Climate Control Mode
- H Air Conditioning ON/OFF button
- I Front Blower OFF button
- J Front Fan speed
- K Mode selection
- L Passenger's temperature control
- M Dual temperature control mode

Max Defrost:

1. Select **Defrost**  Mode **A**
2. Select **Max Fan Speed** **J**
3. Set **Temperature** to **Hot** **F**

Defogging:

1. Select **Defrost**  Mode **A**
2. Select **Max Fan Speed** **J**
3. Select desired **Temperature** **F**

Climate Control Auto Function:

Press **G** AUTO to select Full Auto Operation

Press **K** MODE buttons to control which vents air flows through

Press **M** DUAL to select Dual Temperature Control Operation

NOTE: Defrost  Mode activates A/C and opens Fresh Air Vent.


NOTE: Keep inside glass as clean as possible to reduce window fogging.

NOTE: During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may be engaged at any time to reach desired temperature and reduce humidity.

*If equipped


CENTER PANEL CONTROLS

MANUAL CLIMATE CONTROL*

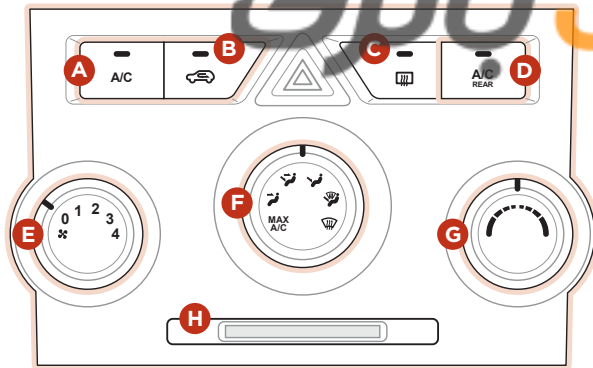



- A Air Conditioning
- B Recirculated air
- C Rear Defroster
- D 3rd row air conditioning ON/OFF*
- E Fan Speed
- F Mode selection
- G Temperature adjustment
- H Ticket holder*
- I 3rd row air conditioning fan speed*

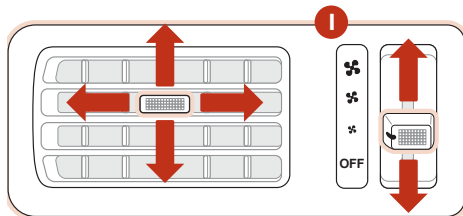3RD ROW AIR CONDITIONING CONTROL*



NOTE: Included in Manual & Automatic Climate Control Systems

Max Defrost:

1. Select **Defrost**  or Floor/Defrost  Mode **F**
2. Select **High Fan Speed** for quick Defrost **E**
3. Select desired **Temperature** **G**

Defogging:

1. Select **Defrost**  Mode **F**
2. Select **Max Fan Speed** **E**
3. Select desired **Temperature** **G**

NOTE: Defrost Mode  activates A/C and opens Fresh Air Vent.


NOTE: MAX A/C Mode automatically engages Recirculated Air.

NOTE: Keep inside glass as clean as possible to reduce window fogging.

*If equipped

Always check the Owner's Manual for complete operating information and safety warning

AUTOMATIC GEAR SHIFT*

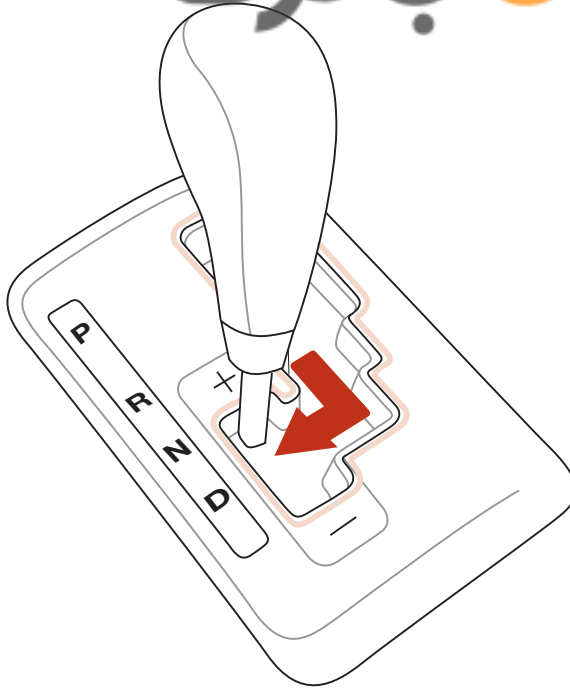

P: Park
R: Reverse
N: Neutral
D: Drive

[+]: Sport Mode Upshift

[-]: Sport Mode Downshift

Sport Mode: Move shift lever from D to left gate

Sport Mode Shifting: Move shift lever up (+) to Upshift or (-) to Downshift

NOTE: Press brake pedal and lock release button to move gearshift from N to P, N to R or from P to any gear.

**If equipped*

CENTER PANEL CONTROLS






MANUAL GEAR SHIFT*

Starting the Engine:

1. Apply Parking Brake **A**
2. Depress Clutch Fully **B**
3. Shift into Neutral **C**
4. Turn Ignition to START

Shifting into Reverse:

1. Depress Clutch Fully **B**
2. Shift into Neutral **C**
3. Pull up on Shift Lever Ring **D**
4. Shift into Reverse **E**

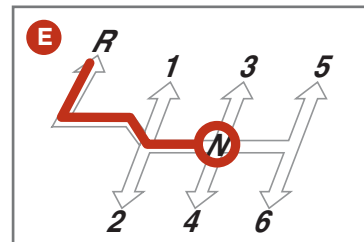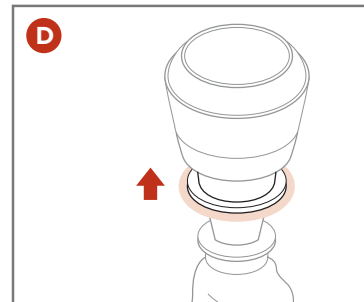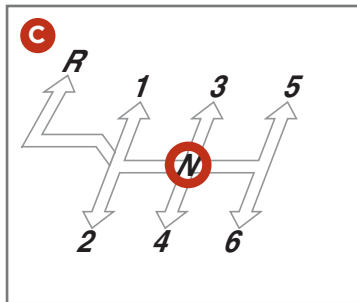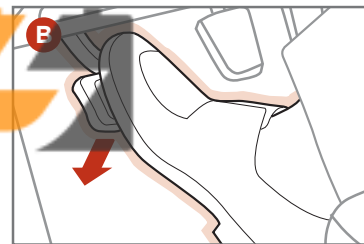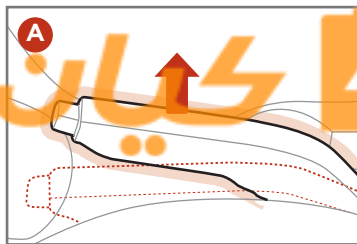

NOTE: When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever ring.


NOTE: Make sure the vehicle is completely stopped before shifting into R (Reverse).

NOTE: Never operate the engine with the tachometer (rpm) in the red zone.

*If equipped

Always check the Owner's Manual for complete operating information and safety warning

POWER ADJUSTABLE DRIVER'S SEAT*

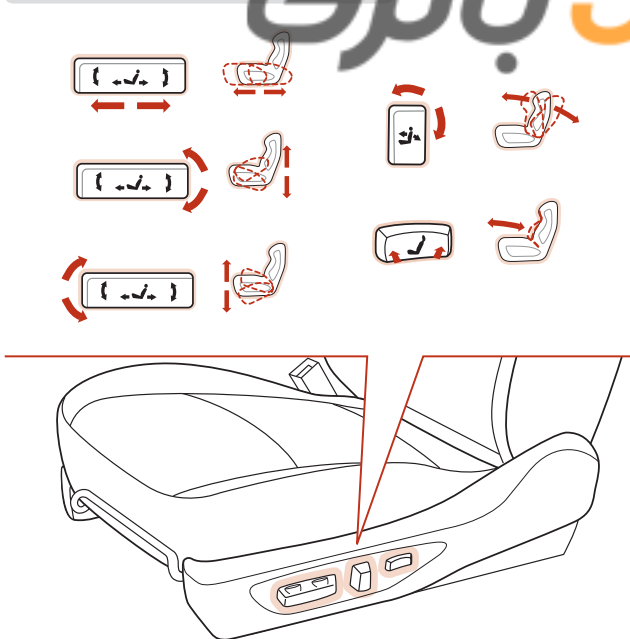


WARNING: Adjusting the driver's seat with the vehicle in motion could cause a loss of control and a serious accident.

WARNING: Reclining front passenger seat can reduce the effectiveness of the safety restraint system and lead to additional injury in an accident.

*If equipped

MANUAL ADJUSTABLE DRIVER'S SEAT*

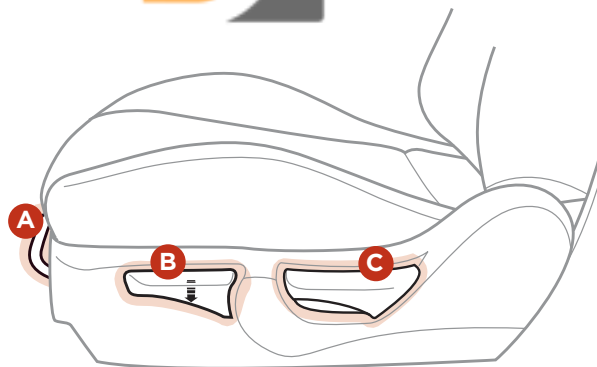


- A** Seat Front/Back Slide Adjuster
- B** Seat Height Adjuster (Driver's Seat Only)*
- C** Seatback Recline Lever

WARNING: Adjusting the driver's seat with the vehicle in motion could cause a loss of control and a serious accident.


WARNING: Reclining front passenger seat can reduce the effectiveness of the safety restraint system and lead to additional injury in an accident.

FOLDING 2ND & 3RD ROW SEATS*

2nd Row Seats

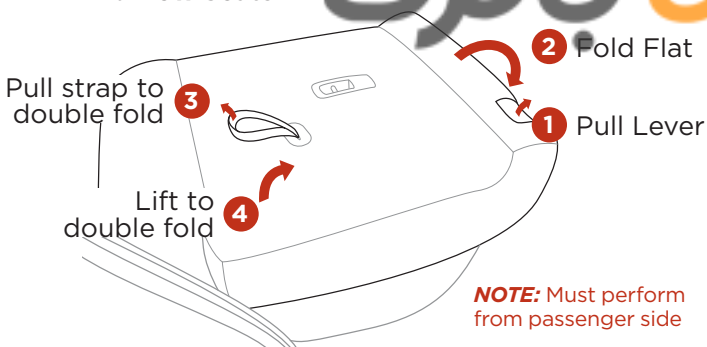

3rd Row Seats

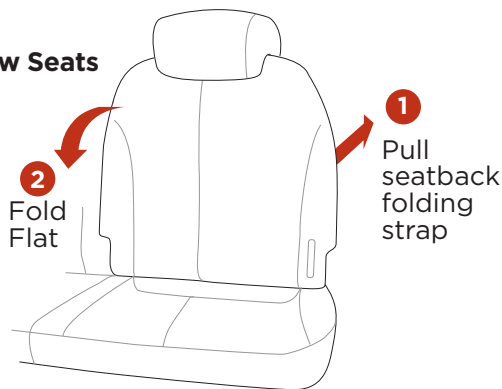


*If equipped

FRONT ACTIVE HEADRESTS*

Moves forward in the event of certain impact collisions to help protect the driver's and front passenger's heads from moving backward, thus helping to minimize neck injuries.


NOTE: To adjust the headrest backward, pull forward to the farthest position and release.

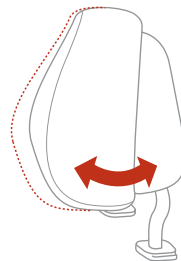

FRONT SEAT HEADREST ADJUSTMENT

To Raise Headrest:
Pull headrest up.

To Lower Headrest:
Press lock knob while pressing down on headrest.

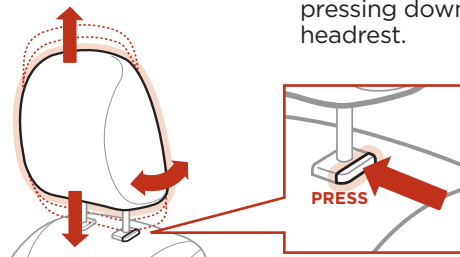

Always check the Owner's Manual for complete operating information and safety warning

SMART KEY*


Smart Key Fob:

- A** Lock All Doors
- B** Unlock Driver's Door. Press twice in 4 seconds to unlock All Doors.
- C** Press and hold to unlock rear hatch and manually open
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button.
- E** Press to release Mechanical Key

Mechanical Key:


- Use to unlock driver's door
- Use to lock glove box

Locking/Unlocking:

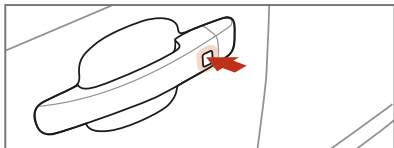


- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

**If equipped*

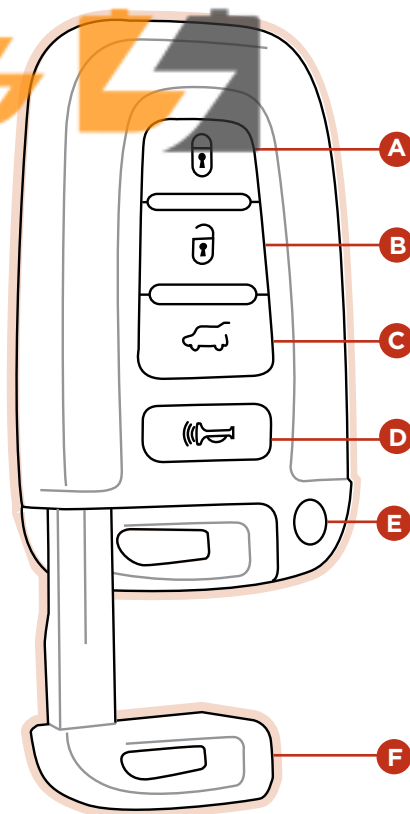

NOTE: The rear hatch unlocks when the Smart Key fob is within close proximity of the vehicle.

REMOTE KEYLESS ENTRY*

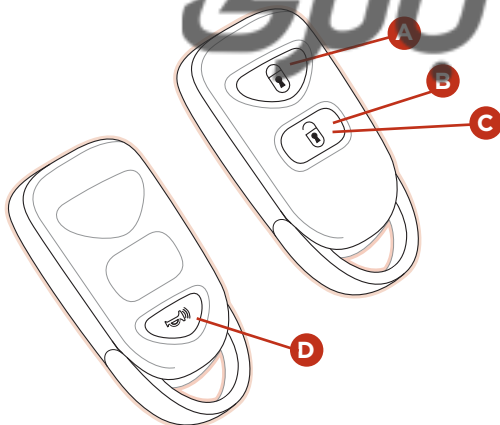

- A** Lock All Doors
- B** Unlock Driver's Door.
Press twice in 4 seconds to unlock All Doors.
- C** Press and hold more than 1 second to unlock Rear Hatch
- D** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button.

*If equipped


DOUBLE-TURN LOCK/UNLOCK ALL*


Turn clockwise once to unlock Driver Door

Turn clockwise again within 4 seconds to unlock All Doors



FUEL CAP / MALFUNCTION INDICATOR (CHECK ENGINE LIGHT)

Tighten for **ONE** CLICK to prevent Malfunction Indicator  from illuminating

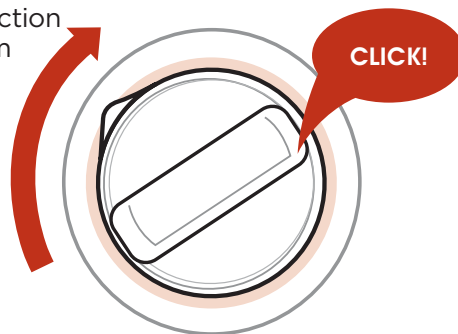


Always check the Owner's Manual for complete operating information and safety warning

POWER WINDOWS, WINDOW LOCK & CENTRAL DOOR LOCK


POWER/HEATED OUTSIDE MIRRORS*

Mirror heaters controlled with Rear Defroster

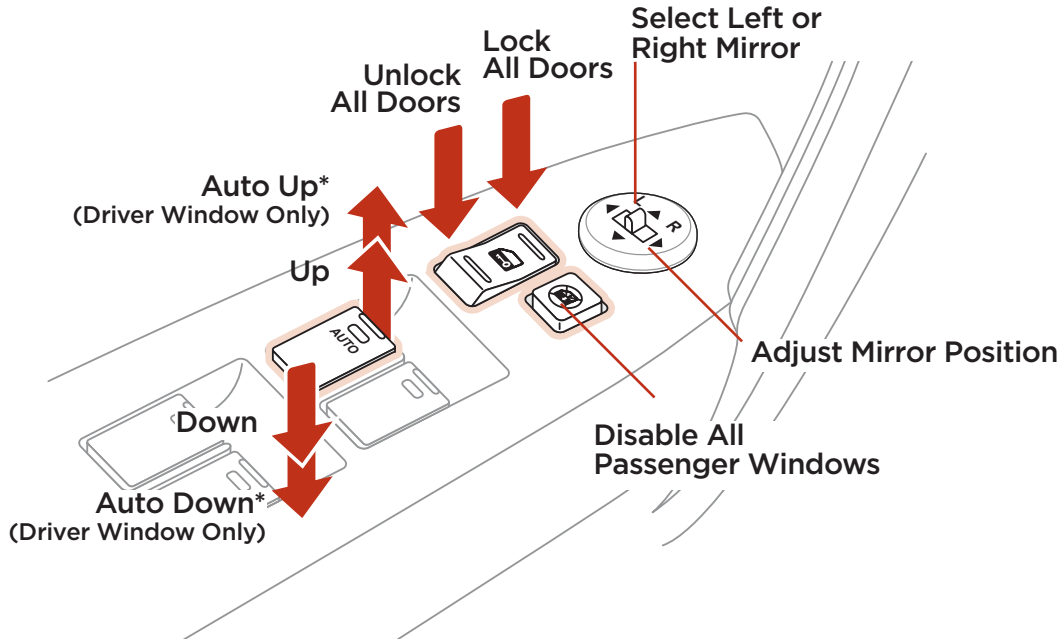


*If equipped

REAR SEAT ENTERTAINMENT SYSTEM*

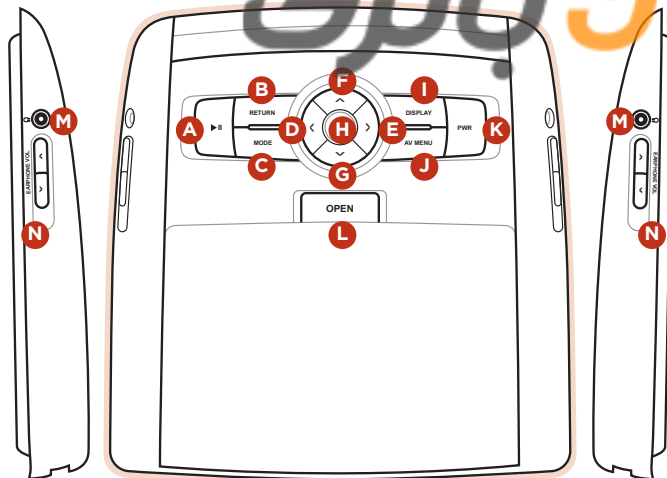

Rear DVD Deck

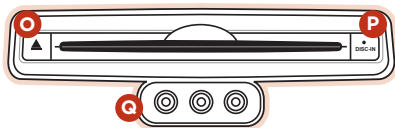

NOTE: Audio playback for the Rear Seat Entertainment System is available only through the use of earphones plugged into the Earphone Connection Terminals, not through the vehicle's audio system speakers.

*If equipped

- A Replay/Pause Current File
- B Previous Screen


NOTE: There is no operation within the main screen or other screens when moving from the child menu to the parent menu.
- C DVD/P/RSE AUX Mode
- D Move selection to the left
- E Move selection to the right
- F Move selection up
- G Move selection down
- H Select/Enter
- I Screen Setting
- J Menu display
- K Power ON/OFF
- L Rear Monitor Open
- M Earphone Connection Terminal
- N Earphone Volume Controller
- O Disc Eject
- P Disc-In Indicator
- Q Auxiliary Ports

Always check the Owner's Manual for complete operating information and safety warning

REAR VIEW BACKUP CAMERA*

System activates when:

- Ignition is ON
- Shift lever is in REVERSE

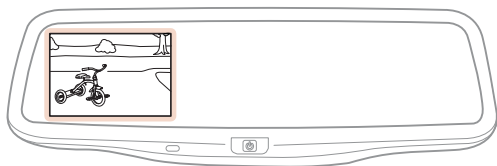


NOTE: If vehicle is equipped with Navigation System, the display will be on the screen.

WARNING: This system provides a supplementary function only. It is the responsibility of the driver to always check the inside/outside rearview mirrors and the area behind the vehicle before and while backing up.

*If equipped

BACKUP WARNING SYSTEM (REAR PARKING ASSIST SYSTEM)*

The Backup Warning System assists the driver while the shift lever is in reverse by chiming if any object is detected within the sensing area to the side of and behind the vehicle. This system will activate when backing up with the ignition key ON.

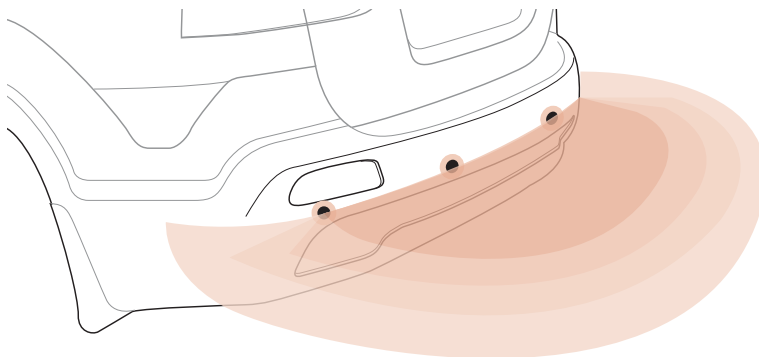

NOTE: Press the Backup Warning System OFF button to deactivate the system (see illustration on page 4).

NOTE: If the vehicle is moved at speeds over 3 mph (5 km/h), the system may not activate correctly.

NOTE: When more than two objects are sensed at the same time, the closest one will be recognized first.

NOTE: The Backup Warning System is a supplementary function only. The operation of the Backup Warning System can be affected by several factors (including environmental conditions). It is the responsibility of the driver to always check the area behind the vehicle before backing up.

OCCUPANT DETECTION SYSTEM (ODS) / PASSENGER AIR BAG OFF INDICATOR



ODS detects the presence and position of the front passenger and adjusts or turns off air bag deployment accordingly.

Depending on the situation and the accident, the system may:


- Deploy air bag with lower force (small or out-of-position occupant)
- Deploy air bag normally (full-size occupant or out-of-position occupant)
- Not deploy the airbag (empty seat)

If the system determines that the air bag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

WARNING: Always properly restrain children in the rear seat of your vehicle. Seat covers must NOT be used because they can affect how the system operates.

Please refer to your Owner's Manual and the separate brochure titled “Understanding Your Safety Belt & Supplemental Restraint System” for more detailed information regarding your vehicle's air bags.

CHILD SAFETY LOCKS

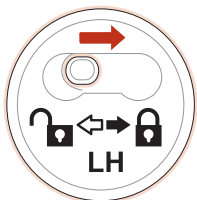

Located on the rear edge of the rear passenger doors, push the safety lock to the LOCK position to disable the inner door handles from opening the rear doors.

WARNING: To help prevent a child from opening rear doors from the inside, rear door safety locks should be activated whenever children are in the vehicle.

**If equipped*

Always check the Owner's Manual for complete operating information and safety warning


SAFETY BELTS

To properly fasten your safety belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

NOTE: We strongly recommend that the driver and all passengers use the safety belts at all times. Proper use of the safety belts helps to decrease the risk of severe injury or death in accidents or sudden stops.


NOTE: The Safety Belt warning chime operates for driver's seat only.

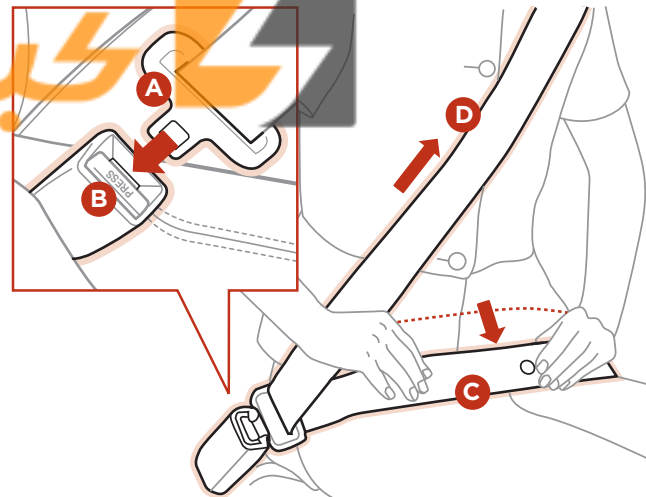

SAFETY BELT RETRACTOR INERTIAL LOCKS

- Inertial locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation, for freedom of movement and increased comfort
- During a STRONG STOP, SUDDEN TURN OR COLLISION, safety belt retractors will automatically lock the belts

NOTE: You may become aware of the safety belts locking while braking or going around sharp corners.

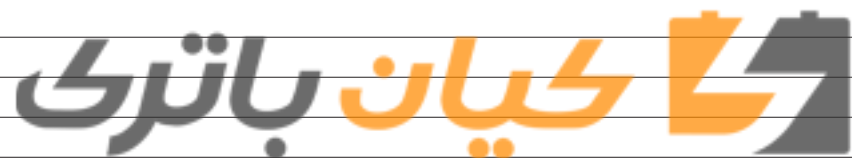



NORMAL MAINTENANCE SCHEDULE

7,500 miles	A						
15,000 miles	A	B					
22,500 miles	A						
30,000 miles	A	B		D			
37,500 miles	A						
40,000 miles			C				
45,000 miles	A	B					
52,500 miles	A						
60,000 miles	A	B		D	E	F	
67,500 miles	A						
75,000 miles	A	B			E		
80,000 miles			C				
82,500 miles	A						
90,000 miles	A	B		D	E		
97,500 miles	A						
100,000 miles							G
105,000 miles	A	B			E		

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

A Inspect*: At first 7,500 miles, inspect all items associated with column B except propeller shaft - then every 15,000 miles afterwards

Lubricate: All locks and hinges, front and rear driveshaft u-joint

Change: Engine oil and oil filter

Perform: Rotate Tires

B Inspect*: Propeller shaft**, cooling system, drive shaft and boots, battery condition, brake fluid, clutch** fluid, brake lines, hoses and connections, brake pedal and operation, chassis/body nuts and bolts, disc brakes and pads**, exhaust pipe and muffler, front suspension ball joints, fuel tank, cap, lines and hoses, power steering pump, belt and hoses, parking brakes, steering operation and linkage, suspension mounting bolts, air cleaner element, air conditioning compressor/air conditioner refrigerant/performance**

Replace: Climate control air filter**

C Inspect*: Rear differential oil**, transfer case oil**, manual transmission fluid**

D Inspect*: Fuel filter, fuel tank air filter

Replace: Air cleaner element,

E Inspect*: Drive belts

F Inspect*: Valve clearance

G Replace: Spark plugs

* and, if necessary, adjust, clean, replace or correct

** If equipped

Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.

Inspect water pump when replacing the drive belt or timing belt.

When adding coolant, use only a qualified coolant additive for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

The drive belt should be replaced when cracks occur or tension is reduced excessively.

Check tire pressure once a month or more.

Kia Sorento Features & Functions Guide

Part Number: UX110-PS-004

© 2010 Kia Motors America, Inc.

All rights reserved.

Warranty may be voided if maintenance schedule is not followed.

Call 1-800-333-4KIA (4542) for Roadside Assistance.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule.



KIA MOTORS
The Power to Surprise™

SORENTO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____


Dealership Name: _____ Sales Consultant: _____ Date: _____

Before Delivery


- ☐ Confirm "Good Battery" with the Kia Battery Tester
- ☐ Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- ☐ Verify all remote keyless entry lock/unlock
- ☐ Ensure floor mats are snapped into place (if applicable)
- ☐ Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- ☐ Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, and Features & Functions Guide)

Key Feature Walkthrough - Demonstrate the following with the customer

- ☐ Climate Control System - pages 16-17

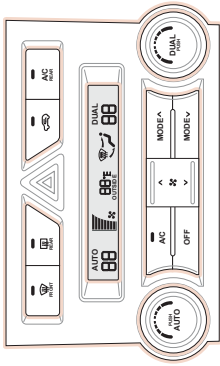

Automatic*

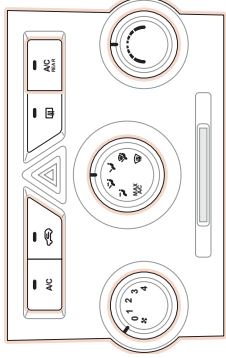

Manual*


Max Defrost: Select Defrost , then select High or Max Fan Speed




3rd Row Air Conditioning Control*

- ☐ Manual Gear Shift* - page 19


Demonstrate lifting ring for reverse gear

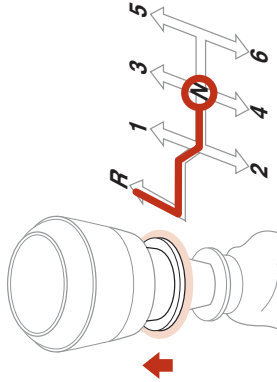

- ☐ Windshield/Rear Wipers & Washers - page 7

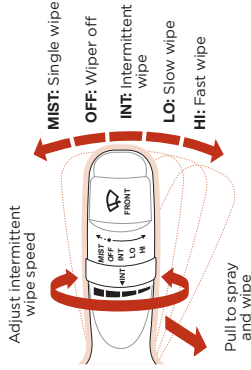

Windshield Wiper/Washer

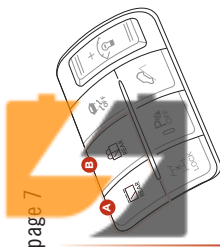

- ☐ Push to turn wiper ON/OFF
- ☐ Push to spray and wipe

Rear Wiper/Washer

*if equipped




KIA MOTORS
The Power to Surprise™

SORENTO CUSTOMER DELIVERY CHECKLIST ...continued


Key Feature Walkthrough - Demonstrate the following with the customer

☐ AM/FM/CD/MP3/SIRIUS Satellite Radio* - page 10

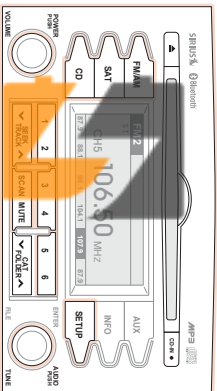


☐ Navigation System* - page 13

For further navigation system operation, refer to the Digital Navigation System Users Manual.

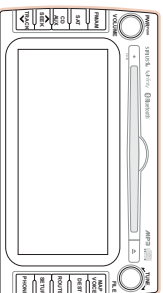


☐ AUX/USB/iPod® Port* - page 14

The Kia Power Cable is needed in order to operate an iPod® through the vehicle's Audio System. The PC Cable provided by Apple Inc., may cause malfunction and should not be used for Kia vehicles.

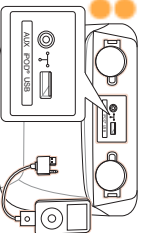

☐ Cruise Control - page 8
Demonstrate operation

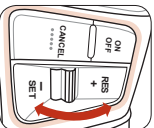

☐ Steering Wheel Bluetooth® Controls* - page 9
Demonstrate operation, and pair customer's phone.



☐ Tire Pressure Monitoring System (TPMS) - page 2

☐ ECONINDER® (ECO) Indicator* - page 3

☐ Engine Start/Stop Button* - page 5

☐ Audio System* - page 10

☐ Digital Clock - page 15

☐ Seat Warmers* - page 15

☐ Folding 2nd & 3rd Row Seats* - page 21

☐ Front Active Headrests - page 21

☐ Smart Key* - page 22

☐ Rear Seat Entertainment System* - page 25

☐ Rear View Backup Camera* - page 26

☐ Backup Warning System* - page 26

☐ PASSENGER AIR BAG OFF Indicator - page 27

During Delivery

**If equipped*

☐ Explain first service process and schedule first service appointment

☐ Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service

☐ Review recommended maintenance schedule and maintenance requirements to validate warranty

☐ Review business hours & Customer 360°Care

☐ Review the Kia 10-year/100,000-mile warranty program

☐ Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle

☐ Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____